





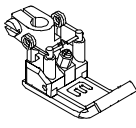


平車規格件表/CONVERSION CHART









P1

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號
F007J F858J—W121	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UYX128GAS #10
F007J F858J—W121 /UTG(UTJ)	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UYX128GAS #10
F007J F858J—U121	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UYX128GAS #10
F007J F858J—U121 /UTH(UTK)	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UYX128GAS #10
F007J F858J—W122	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UYX128GAS #10
F007J F858J—W122 /UTG(UTJ)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UYX128GAS #10
F007J F858J—U122	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UYX128GAS #10
F007J F858J—U122 /UTH(UTK)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UYX128GAS #10

註：P2544-A/P2545-A為固定式押具舌,亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A
P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.
P2446-A/P2447-A為固定式押具舌,亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A
P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

平車規格件表/CONVERSION CHART






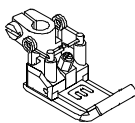
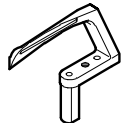
P2

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號
F007J F858J-U122 /FP	232	M5232	E 1623	D 1206	H1257	P4011-A	ME28P	—	TVX5 #14
F007J F858J-W 123	240 248 356 364	M5240 M5248 M5356 M5364	E 1534 E 1535 E 1836 E 1837	D 1206 D 1206 D 1207 D 1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UYX128GAS #10
F007J F858J-W 123 /UTG(UTJ)	240 248 356 364	M5240 M5248 M5356 M5364	E 1534 E 1535 E 1836 E 1837	D 1206 D 1206 D 1207 D 1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UYX128GAS #10
F007J F858J-W162	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H1259 H1259	P2446-A P2447-A	ME28A	MH41	TVX5 #14~16
F007J F858J-U162	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H1259 H1259	P2446-A P2447-A	ME28A	—	TVX5 #14~16
F007J F858J-W162 UTG(UTJ)	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H1259 H1259	P2446-A P2447-A	ME28A	MH41	TVX5 #14~16
F007J F858J-U 162 /UTH(UTK)	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H1259 H1259	P2446-A P2447-A	ME28A	—	TVX5 #14~16
F007J F858J-W222 /FQ	232 240 248 356 364	M5232 M5240 M5248 M5356 M5364	E 3023 E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1261 H 1262 H 1262	P1813-A P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UYX128GAS #10
F007J F858J-W222 /UTG(UTJ)/FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UYX128GAS #10
F007J F858J-U 222 /UTH(UTK)/FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UYX128GAS #10

註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A
P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.
P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A
P2446-A/P2447-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2466-A.

平車規格件表/CONVERSION CHART









P3

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號
F007J-W222 F858J /FQ/FEC(FAC)	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UYX128GAS #10
F007J-U222 F858J /FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P2314-A P2315-A P2616-A P2617-A	ME28	—	UYX128GAS #10
F007J-W222A F858J FQ/FEC(FAC)	240 248 356 364	M5240 M5248 M5356 M5364	E 3124 E 3125 E 3426 E 3427	D 1315 D 1315 D 1316 D 1316	H 1261 H 1261 H 1262 H 1262	P1914-A P1915-A P2216-A P2217-A	ME28	MH41	UYX128GAS #10
F007J-W222 F858J /FFD(FFP)	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UYX128GAS #10
F007J-U222 F858J /FFD(FFP)	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P2314-A P2315-A P2616-A P2617-A	ME28	—	UYX128GAS #10
F007J-W222 F858J /FSM	240-4 248-4 364-4	M5240P M5248P M5364P	E 3724 E 3725 E 3727	D 1516	H 1262 H 1262 H 1262	P2714-A P2715-A P2717-A	ME28	MH41	UYX128GAS #10
F007J-W322 F858J /FDC	356 364	M5356 M5364	E 4826 E 4827	D 1207 D 1207	H 1359 H 1359	P2446-A P2447-A	ME28	MH41	UYX128GAS #10
F007J-W322 F858J /UTG(UTJ)/FDC	356 364	M5356 M5364	E 4826 E 4827	D 1207 D 1207	H 1359 H 1359	P2446-A P2447-A	ME28	MH41	UYX128GAS #10
F007J-U322 F858J /FDC	356 364	M5356 M5364	E 4826 E 4827	D 1207 D 1207	H 1359 H 1359	P2446-A P2447-A	ME28	—	UYX128GAS #10

註：P2544-A/P2545-A為固定式押具舌，亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A。
P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.
P2446-A/P2447-A為固定式押具舌，亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A。
P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.
W222A-FAC(FEC) 短切刀 W222A-FAC(FEC) Short Trimmer
W222-FAC(FEC) 長切刀 W222-FAC(FEC) Long Trimmer

平車規格件表/CONVERSION CHART

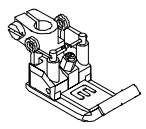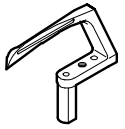P4

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號
F007J F858J—U322 /UTH(UTK)/FDC	356 364	M5356 M5364	E 4826 E 4827	D 1207 D 1207	H 1359 H 1359	P2446-A P2447-A	ME28	—	UYX128GAS #10
F007J F858J—W322 /FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	MH41	UYX128GAS #10
F007J F858J—W322 /UTG(UTJ)/FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	MH41	UYX128GAS #10
F007J F858J—U322 /FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	—	UYX128GAS #10
F007J F858J—U322 /UTH(UTK)/FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	—	UYX128GAS #10
F007J F858J—W 522 /FE(FFC)/FR	232 240 248 356 364	M5232 M5240 M5248 M5356 M5364	E 6023 E 6024 E 6025 E 6326 E 6327	D 2221 D 2221 D 2221 D 2222 D 2222	H 2267 H 2267 H 2267 H 2268 H 2268	P2813-A P2814-A P2815-A P3116-A P3117-A	ME28	MH41	UYX128GAS #10
F007J F858J—U 522 /FE(FFC)/FR	240 248 356 364	M5240 M5248 M5356 M5364	E 6024 E 6025 E 6326 E 6327	D 2221 D 2221 D 2222 D 2222	H 2267 H 2267 H 2268 H 2268	P2814-A P2815-A P3116-A P3117-A	ME28	—	UYX128GAS #10

09/12/11







註(1) : P2544-A/P2545-A為固定式押具舌,亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A.
P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.
P2446-A/P2447-A為固定式押具舌,亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A.
P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.

註(2) : F007J—W/U322A-³⁵⁶/₃₆₄/FDC 時,該針板與送具改用F007H—W/U122-³⁵⁶/₃₆₄之針板與送具

When W/U322A-³⁵⁶/₃₆₄/FDC, The needle plate and the feed dog have to be replaced by F007H—W/U122-³⁵⁶/₃₆₄ needle plate and the feed dog.

平車規格件表/CONVERSION CHART

P5

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主 送 具	差 送 具	押 具	勾 針	上 叉	針 號
F007J—W512 F858J /FE(FFC)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P 2914-A P 2915-A P 3216-A P 3217-A	ME28	MH41	UYX128GAS #10
F007J—U512 F858J /FE(FFC)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P 3414-A P 3415-A P 3716-A P 3717-A	ME28	—	UYX128GAS #10

註(1) : P2544-A/P2545-A為固定式押具舌,亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A
P2544-A/P2545-A is the fixed presser foot tongue. It can be replaced by the removable presser foot tongue P2565-A.
P2446-A/P2447-A為固定式押具舌,亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A
P2446-A/P2447-A is the fixed presser tongue. It can be replaced by the removable presser foot tongue P2466-A.





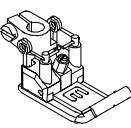
09/12/11

註(2) : F007J—W/U322A-³⁵⁶/₃₆₄/FDC 時, 該針板與送具改用F007H—W/U122-³⁵⁶/₃₆₄ 之針板與送具


When W/U322A-³⁵⁶/₃₆₄/FDC, The needle plate and the feed dog have to be replaced by C007J—W/U122-³⁵⁶/₃₆₄ needle plate and the feed dog.

平車規格件表/CONVERSION CHART

P6

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號
F007J F858J-U613 /FBP	256	M5356	E 1836L	D 1207	H 1259	P 4000-A	ME28	—	TVX5 #14~18
	264	M5364	E 1837L	D 1207	H 1259	P 4001-A	ME28	—	
F007J F858J-U712	264	M5264	E 5827	D 5207	H 5259	P 4117-A	ME28	—	DVX43#11~16
F007J F858J-U712 /FSP	264	M5264	E 5827	D 5207	H 5259	P5117-A (成品寬1.0mm用)	FS03/04	—	DVX43#11~16
F007J F858J-U712A /FSP	264	M5264	E 5827	D 5207	H 5259	P5118-A (成品寬1.2mm用)	FS03/04	—	DVX43#11~16
F007J F858J-U712 /FSR	264	M5264	E 5927	D 5307	H 5359	P 4217-A	FS03/04	—	TVX7 #12~14
F007J F858J-W722 /FY	388	M4388	E 6828	D 6207	H 6259	P 6117-A	FS03/04/FY02	FY09	TVX7 #12
F007J F858J-W922 /FW(FWP)	456 460 464	M5456 M5460 M5464	E1828 E1838 E1848	D1207	H1259	P2428Q-A P2438Q-A P2448Q-A	FW28D	MH41	SMX1014B #10 (MY1014B #70 ,SY7256)
F007J F858J-W922 /FW(FWP)/UTG	456 460 464	M5456 M5460 M5464	E1828 E1838 E1848	D1207	H1259	P2428Q-A P2438Q-A P2448Q-A	FW28D	MH41	SMX1014B #10 (MY1014B #70 ,SY7256)
F007J F858J-W922 /FW(FWP)/UTJ	456 460 464	M5456 M5460 M5464	E1828 E1838 E1848	D1207	H1259	P2428Q-A P2438Q-A P2448Q-A	FW28D	MH41	SMX1014B #10 (MY1014B #70 ,SY7256)

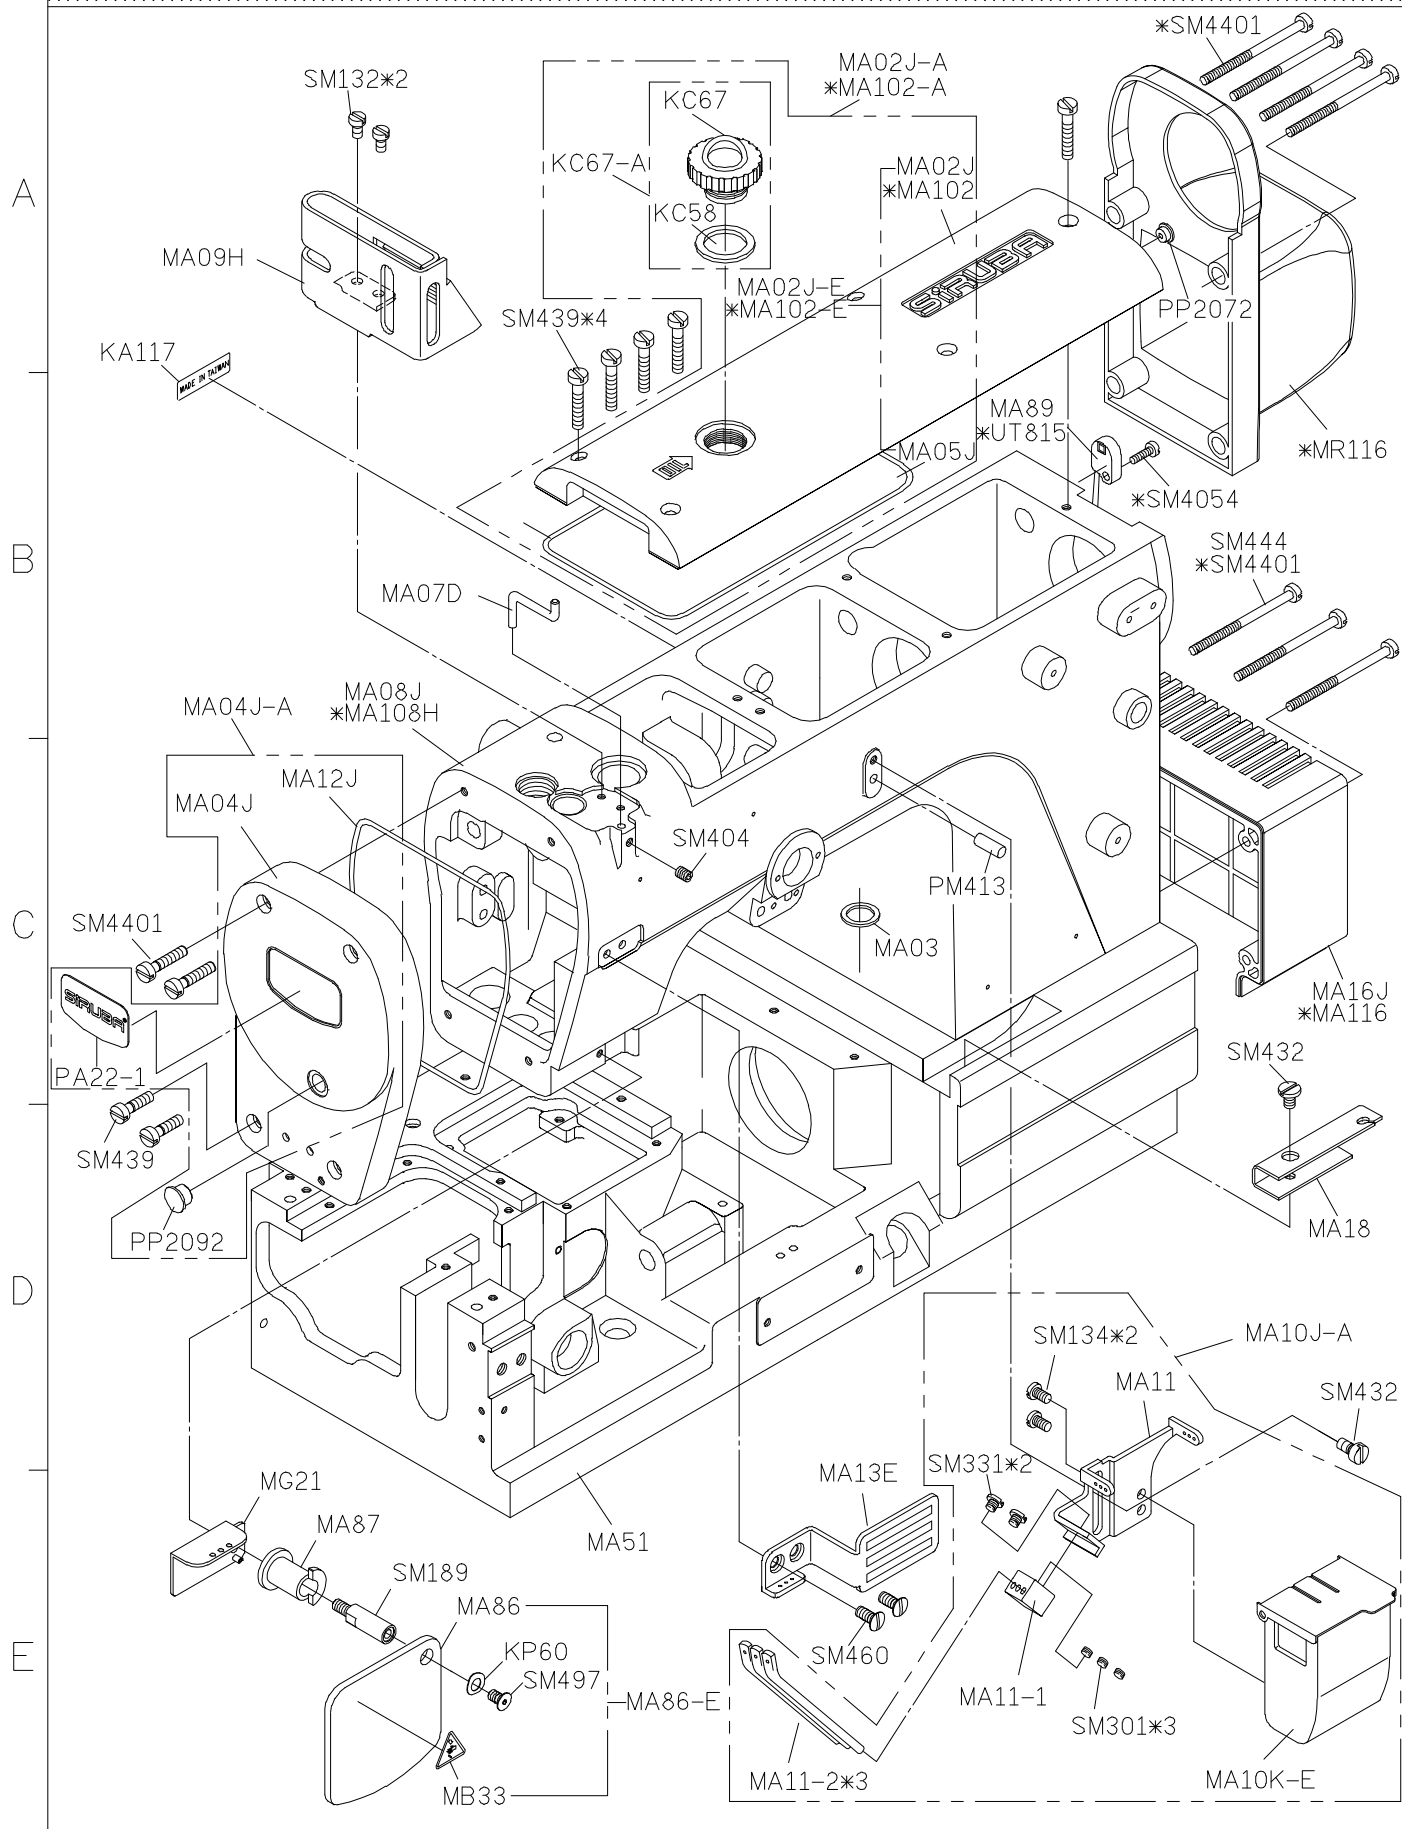F007J PARTS LIST FOR MA-J GROUP P.1/2




P.2/2



FOR F007J/F007JD/F858J/F858JD

11/07/07

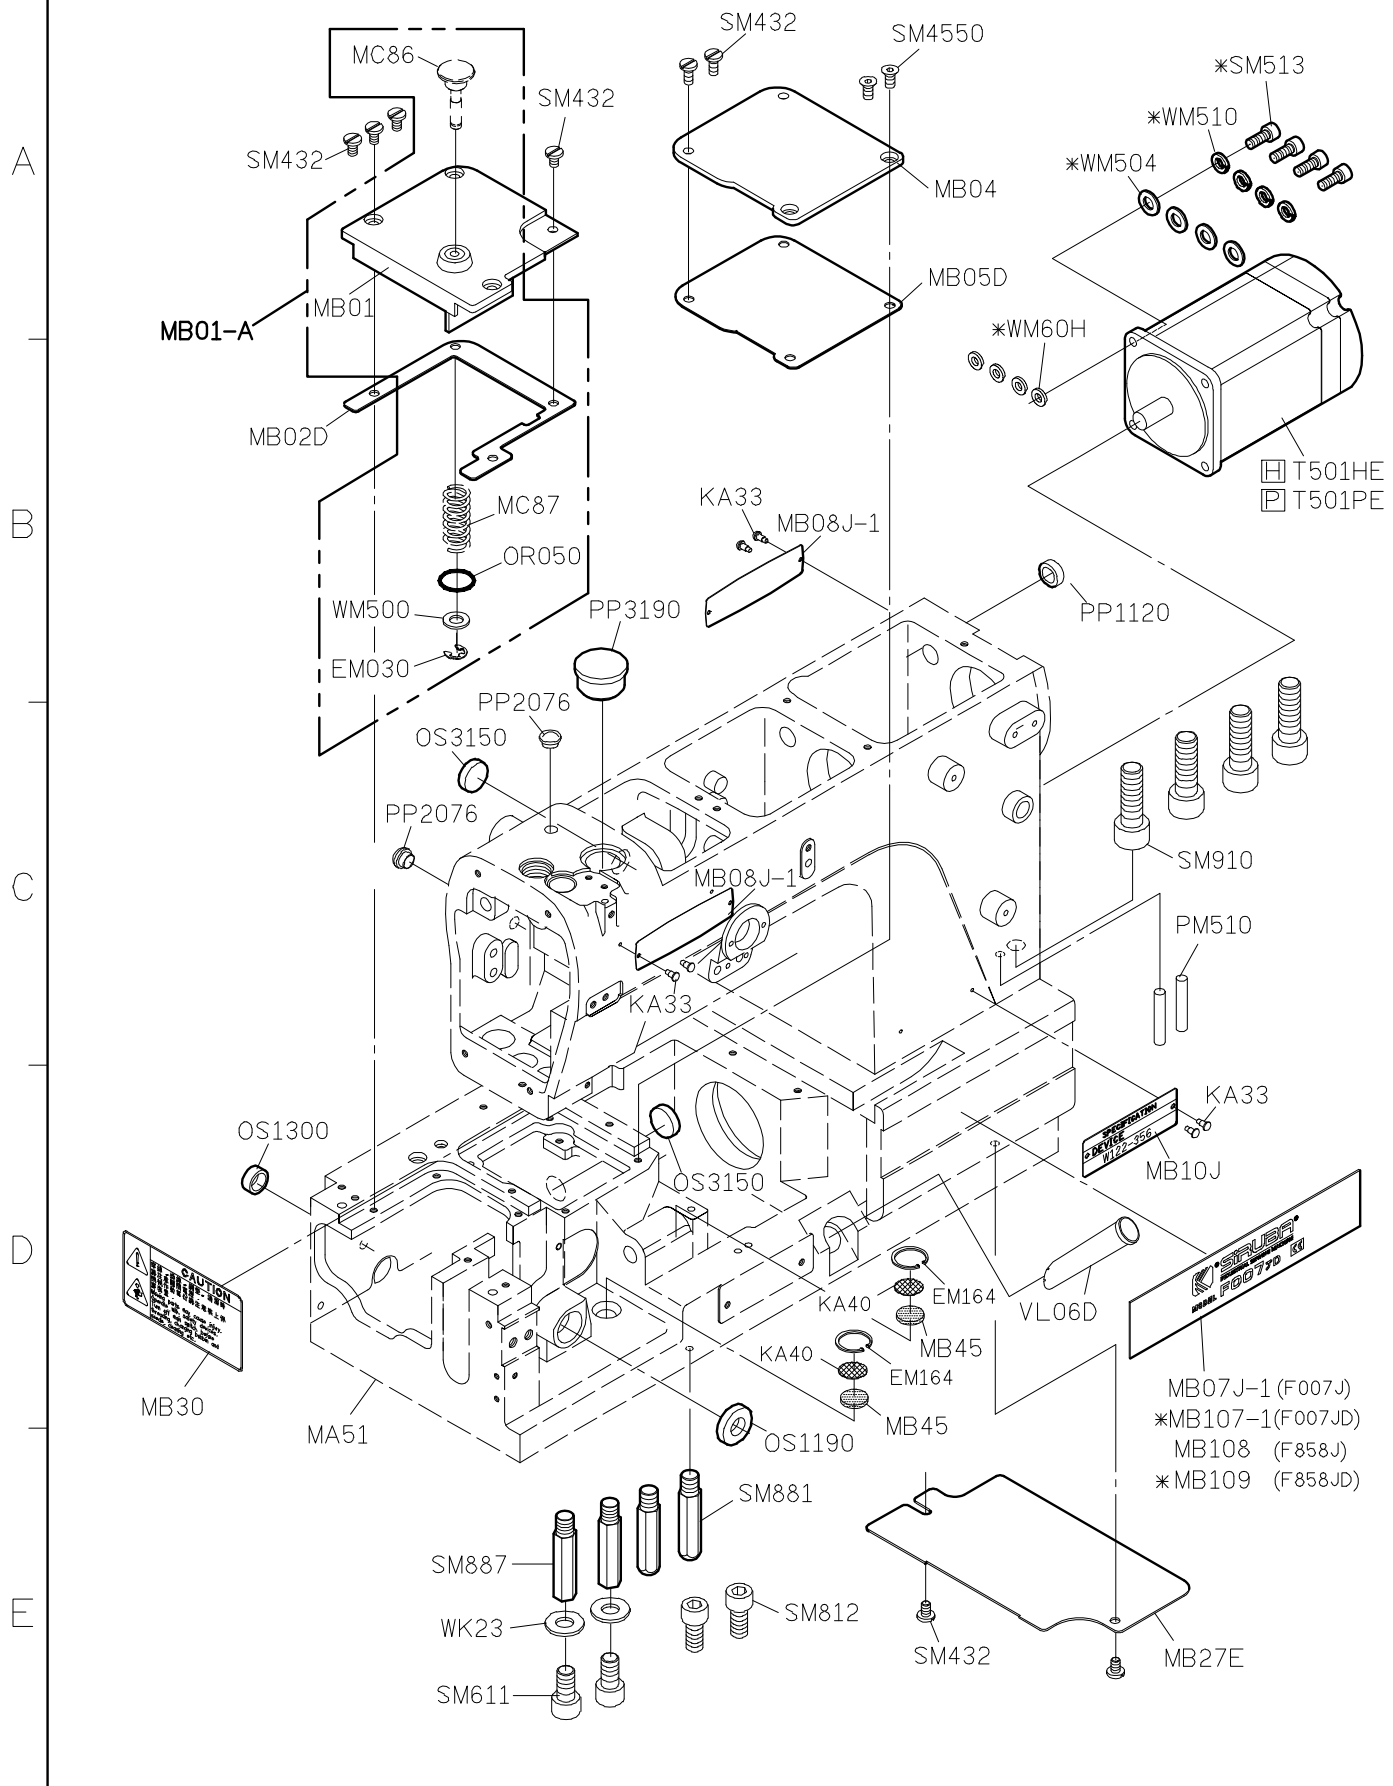
F007J PARTS LIST FOR MB-J GROUP P.1/1



1 FOR F007J/F007JD/F858J/F858JD
 2
 3
 4
 5
 FOR F007J/F007JD/F858J/F858JD
 * USE FOR F007JD/F858JD

FOR F007JD/F858JD H牌馬達
 FOR F007JD/F858JD P牌馬達

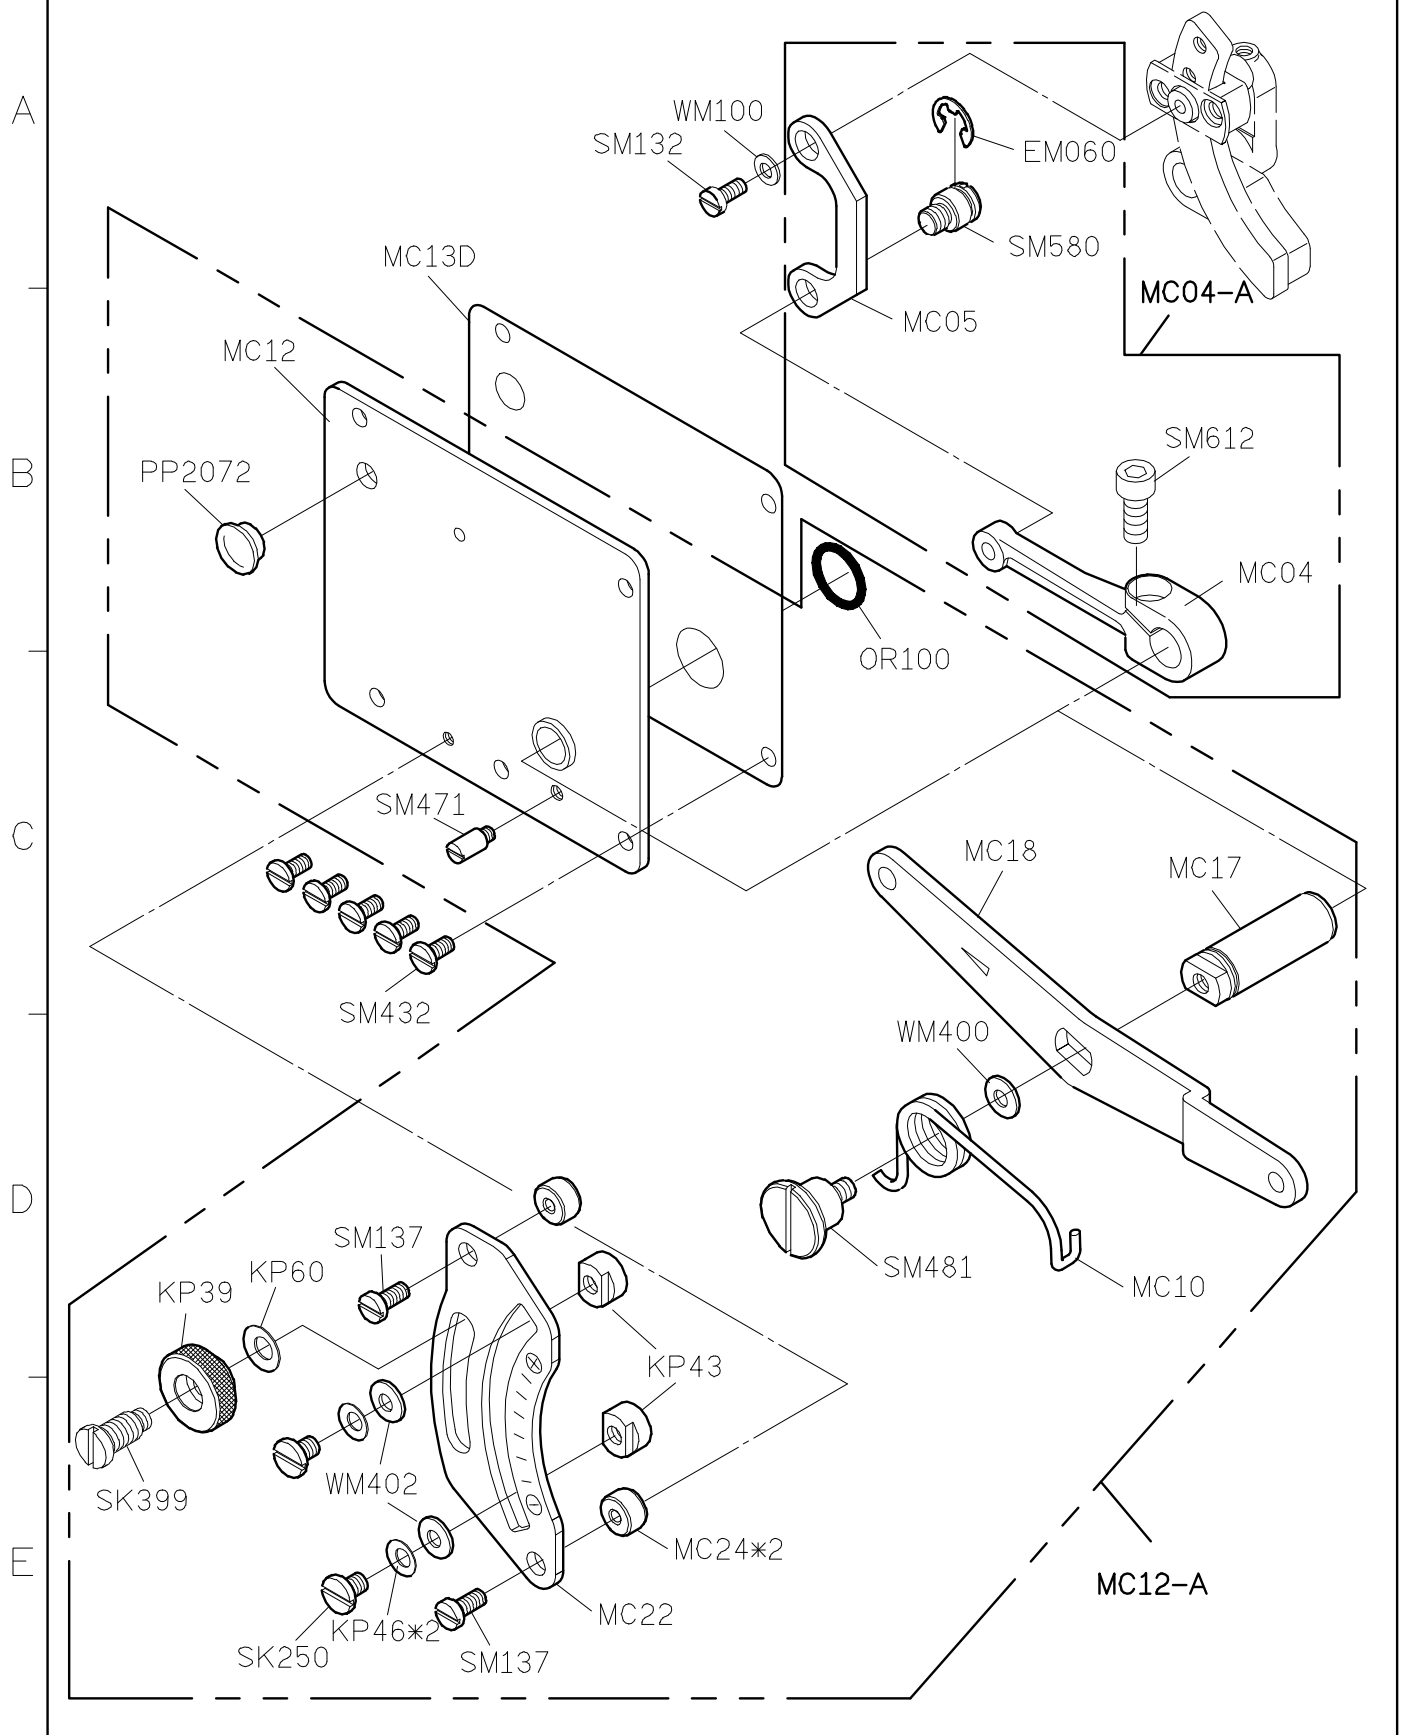10/05/20



P.2/2



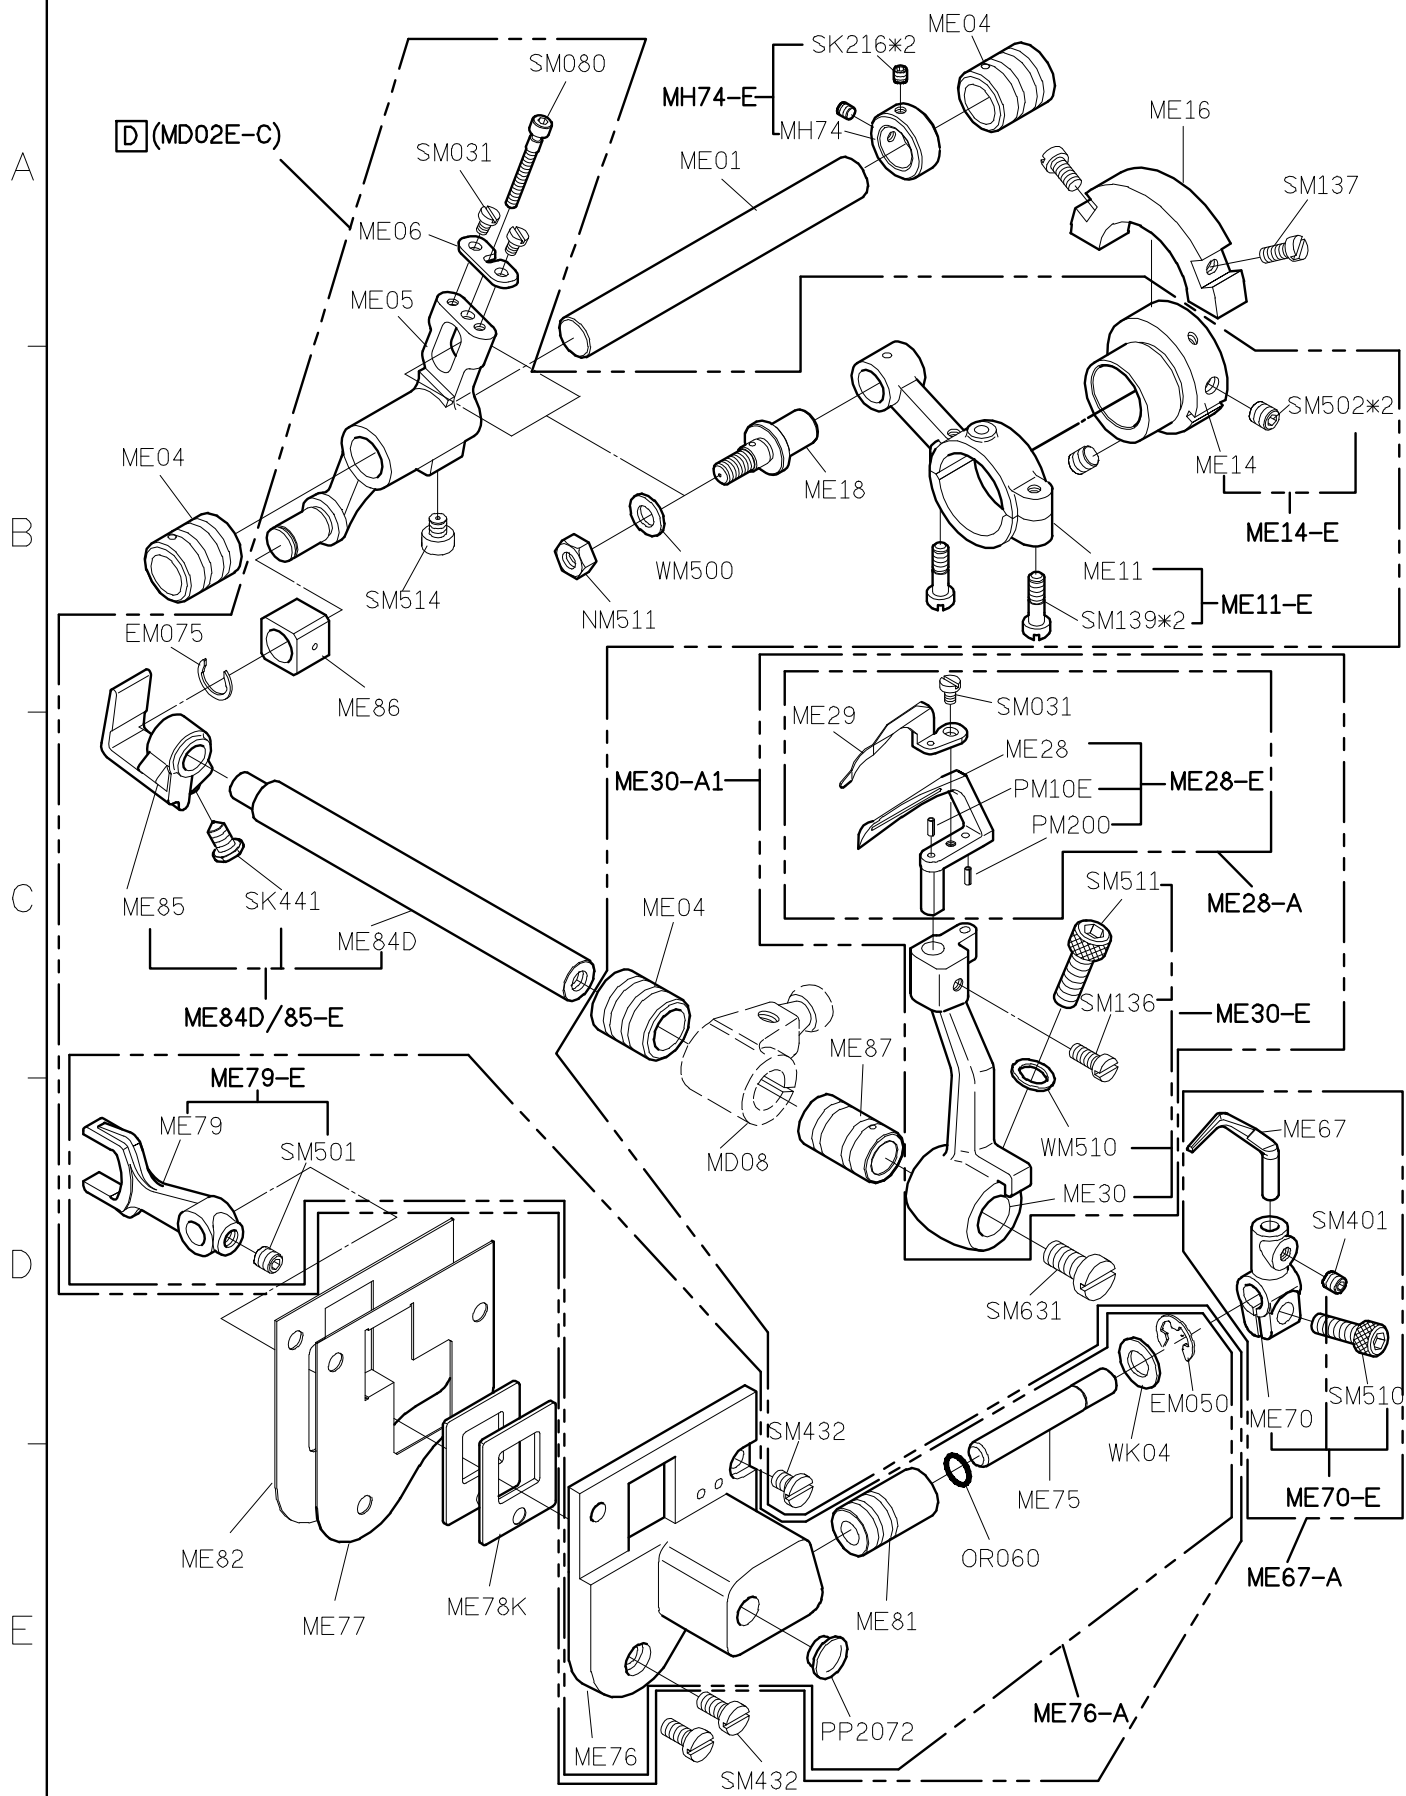
GROUP P.1/1



*USE FOR F007 ID

11/11/23

F007J PARTS LIST FOR ME-J GROUP P.1/1




P.1/1



*USE FOR F007JD/F858JD

11/08/29

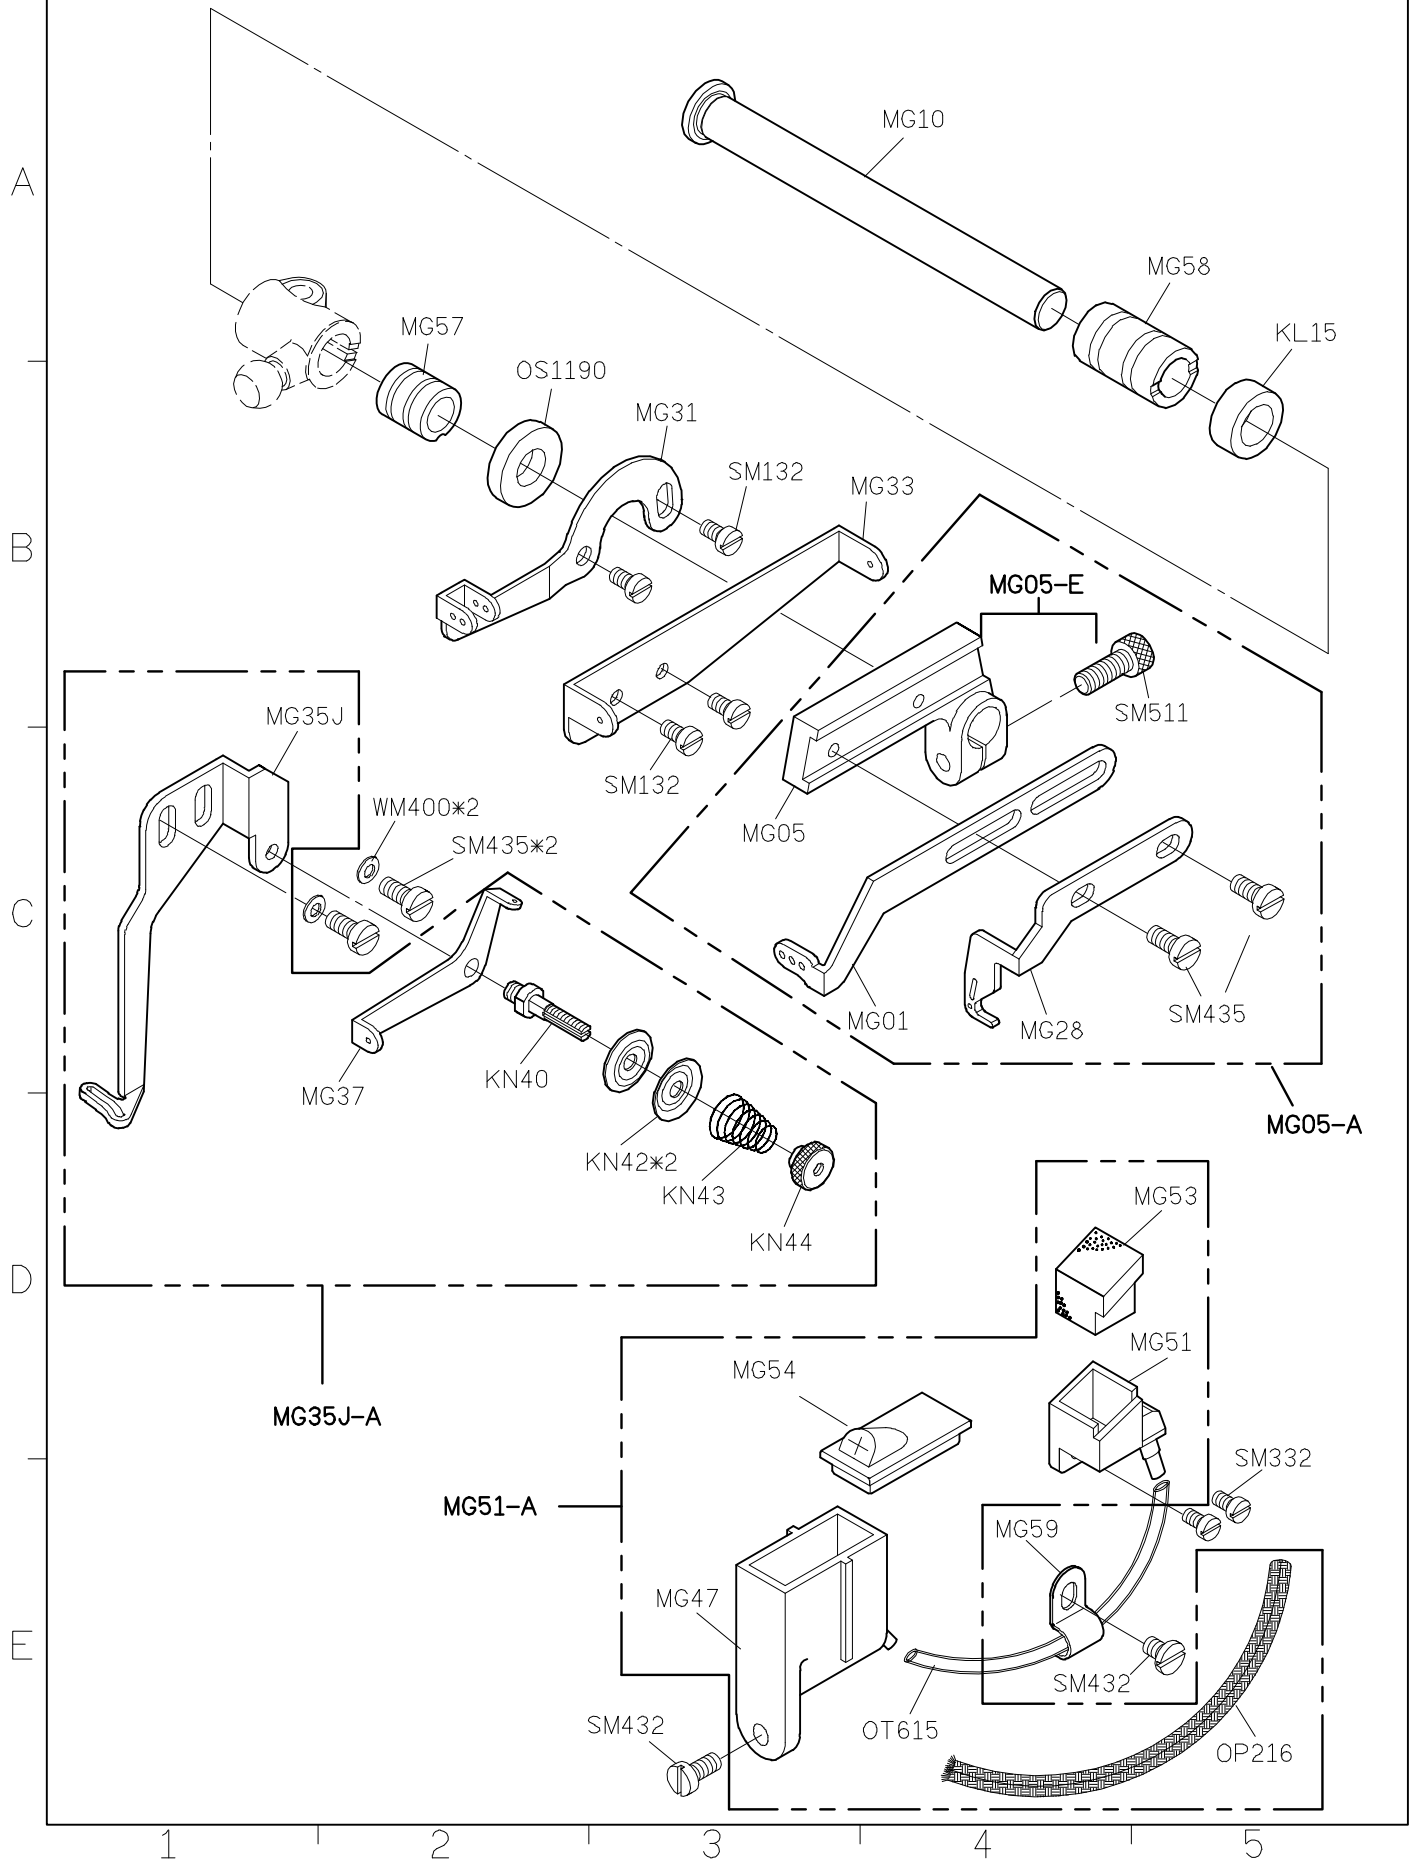
F007J PARTS LIST FOR MG GROUP P.1/1




P.1/1



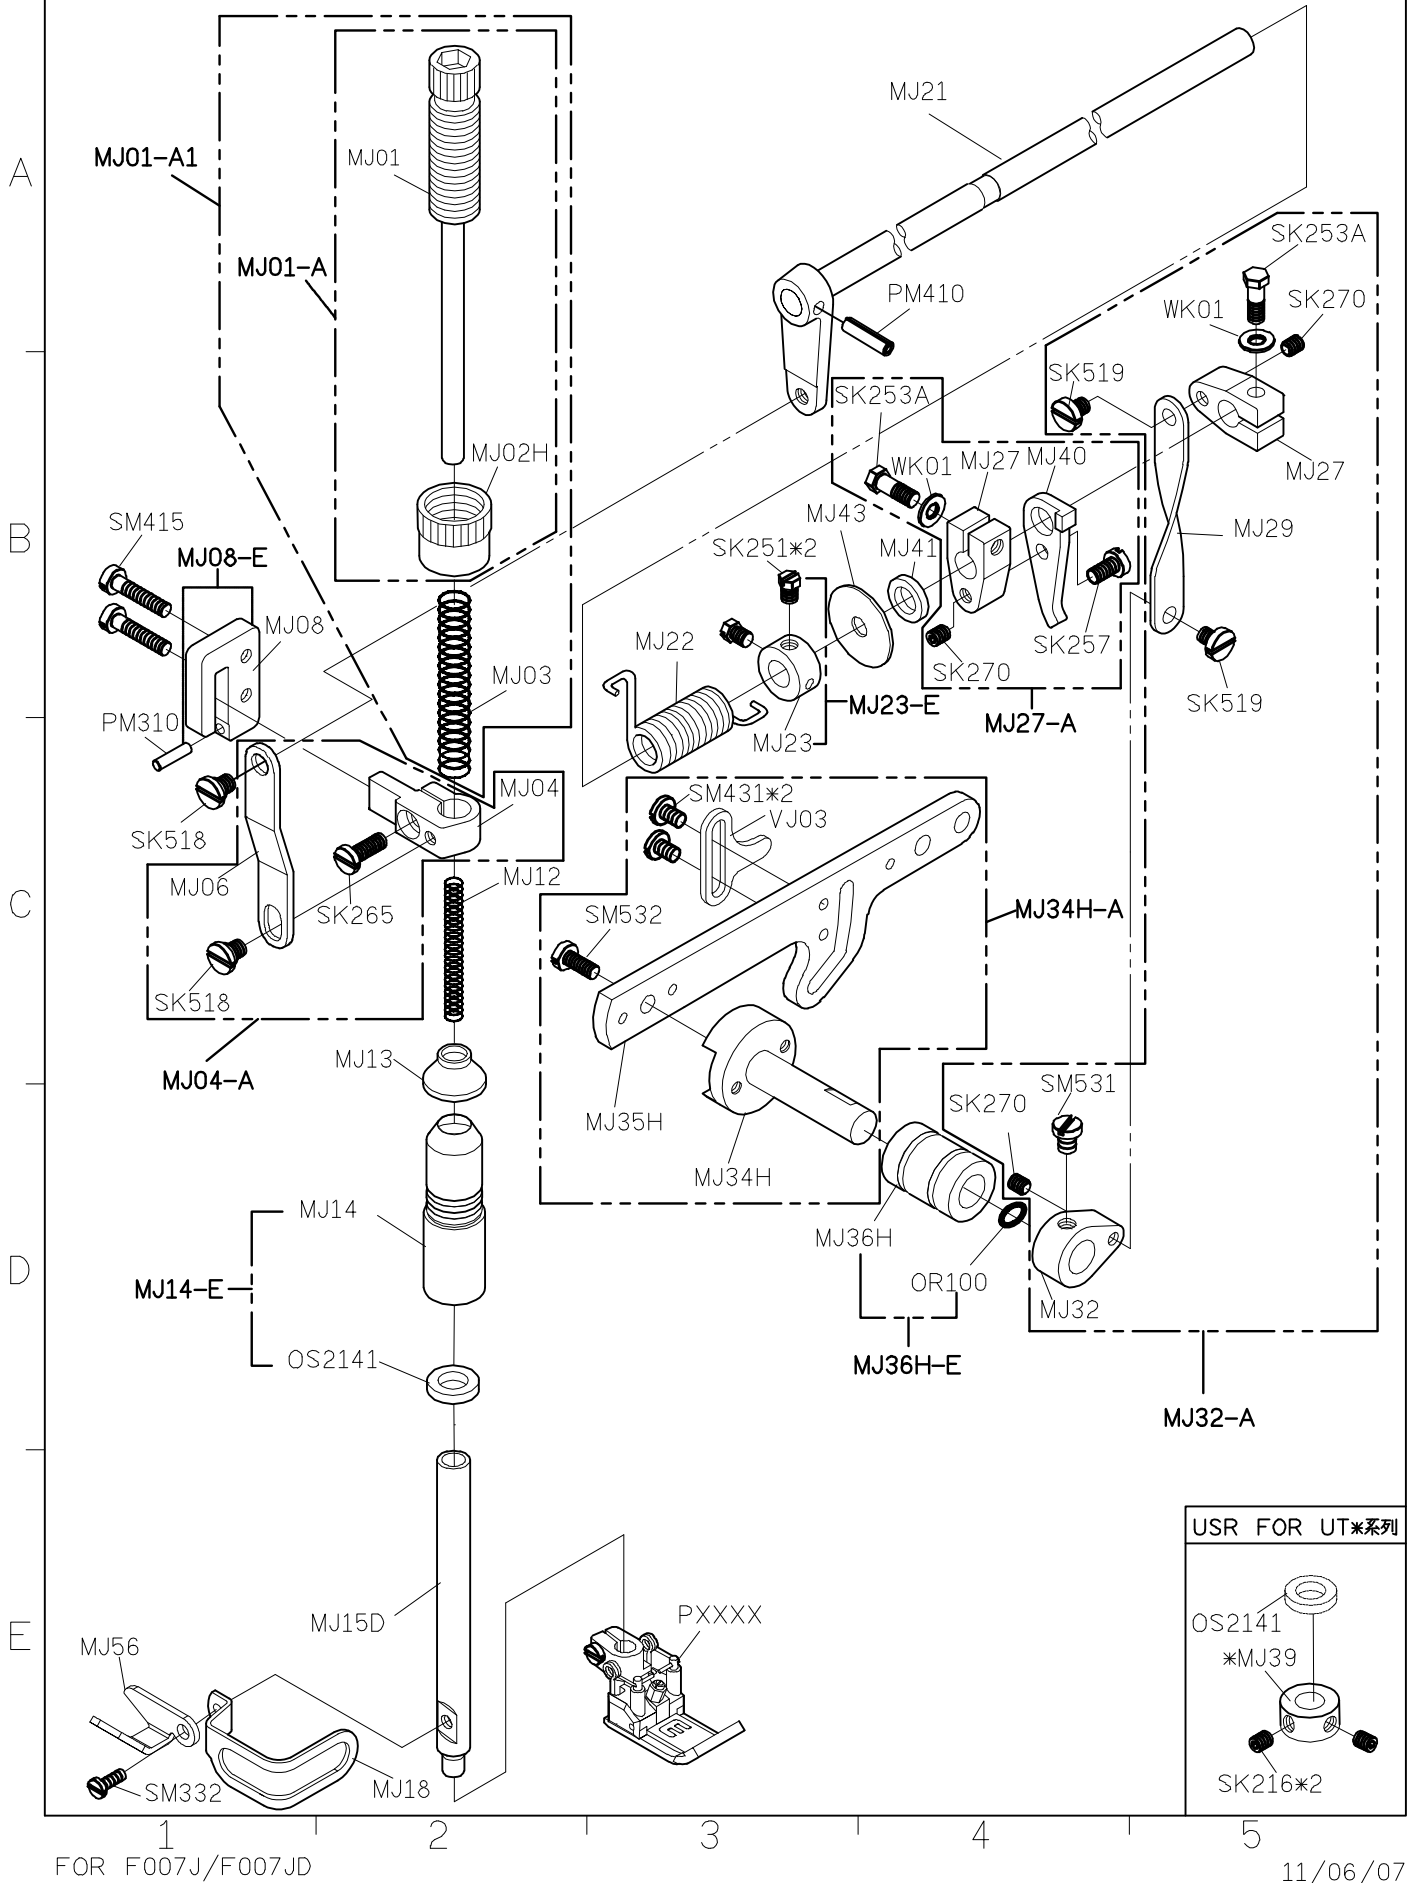F007J PARTS LIST FOR MJ GROUP P.1/1



F007J PARTS LIST FOR MK GROUP P.1/1

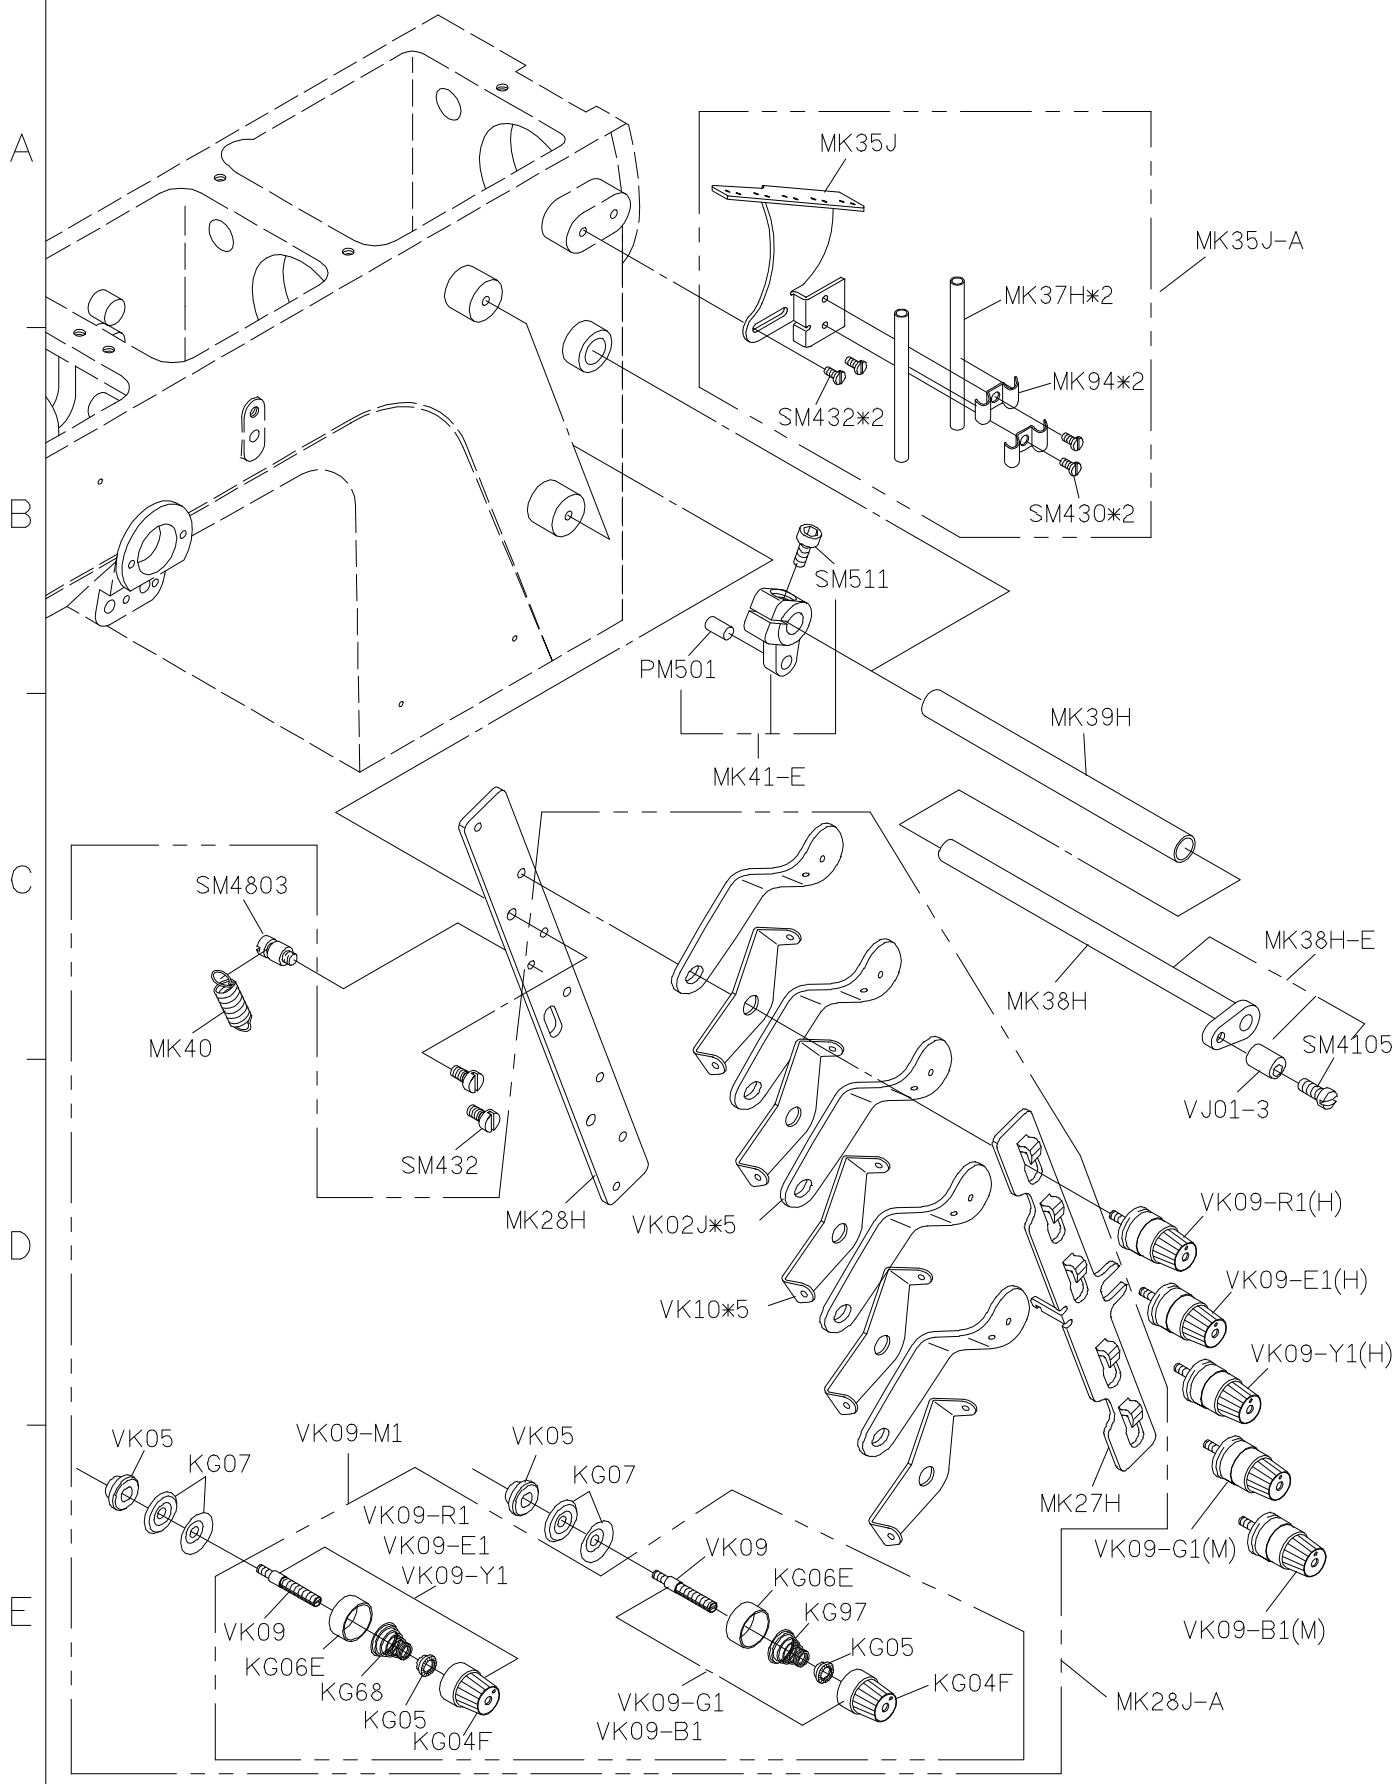

F007J

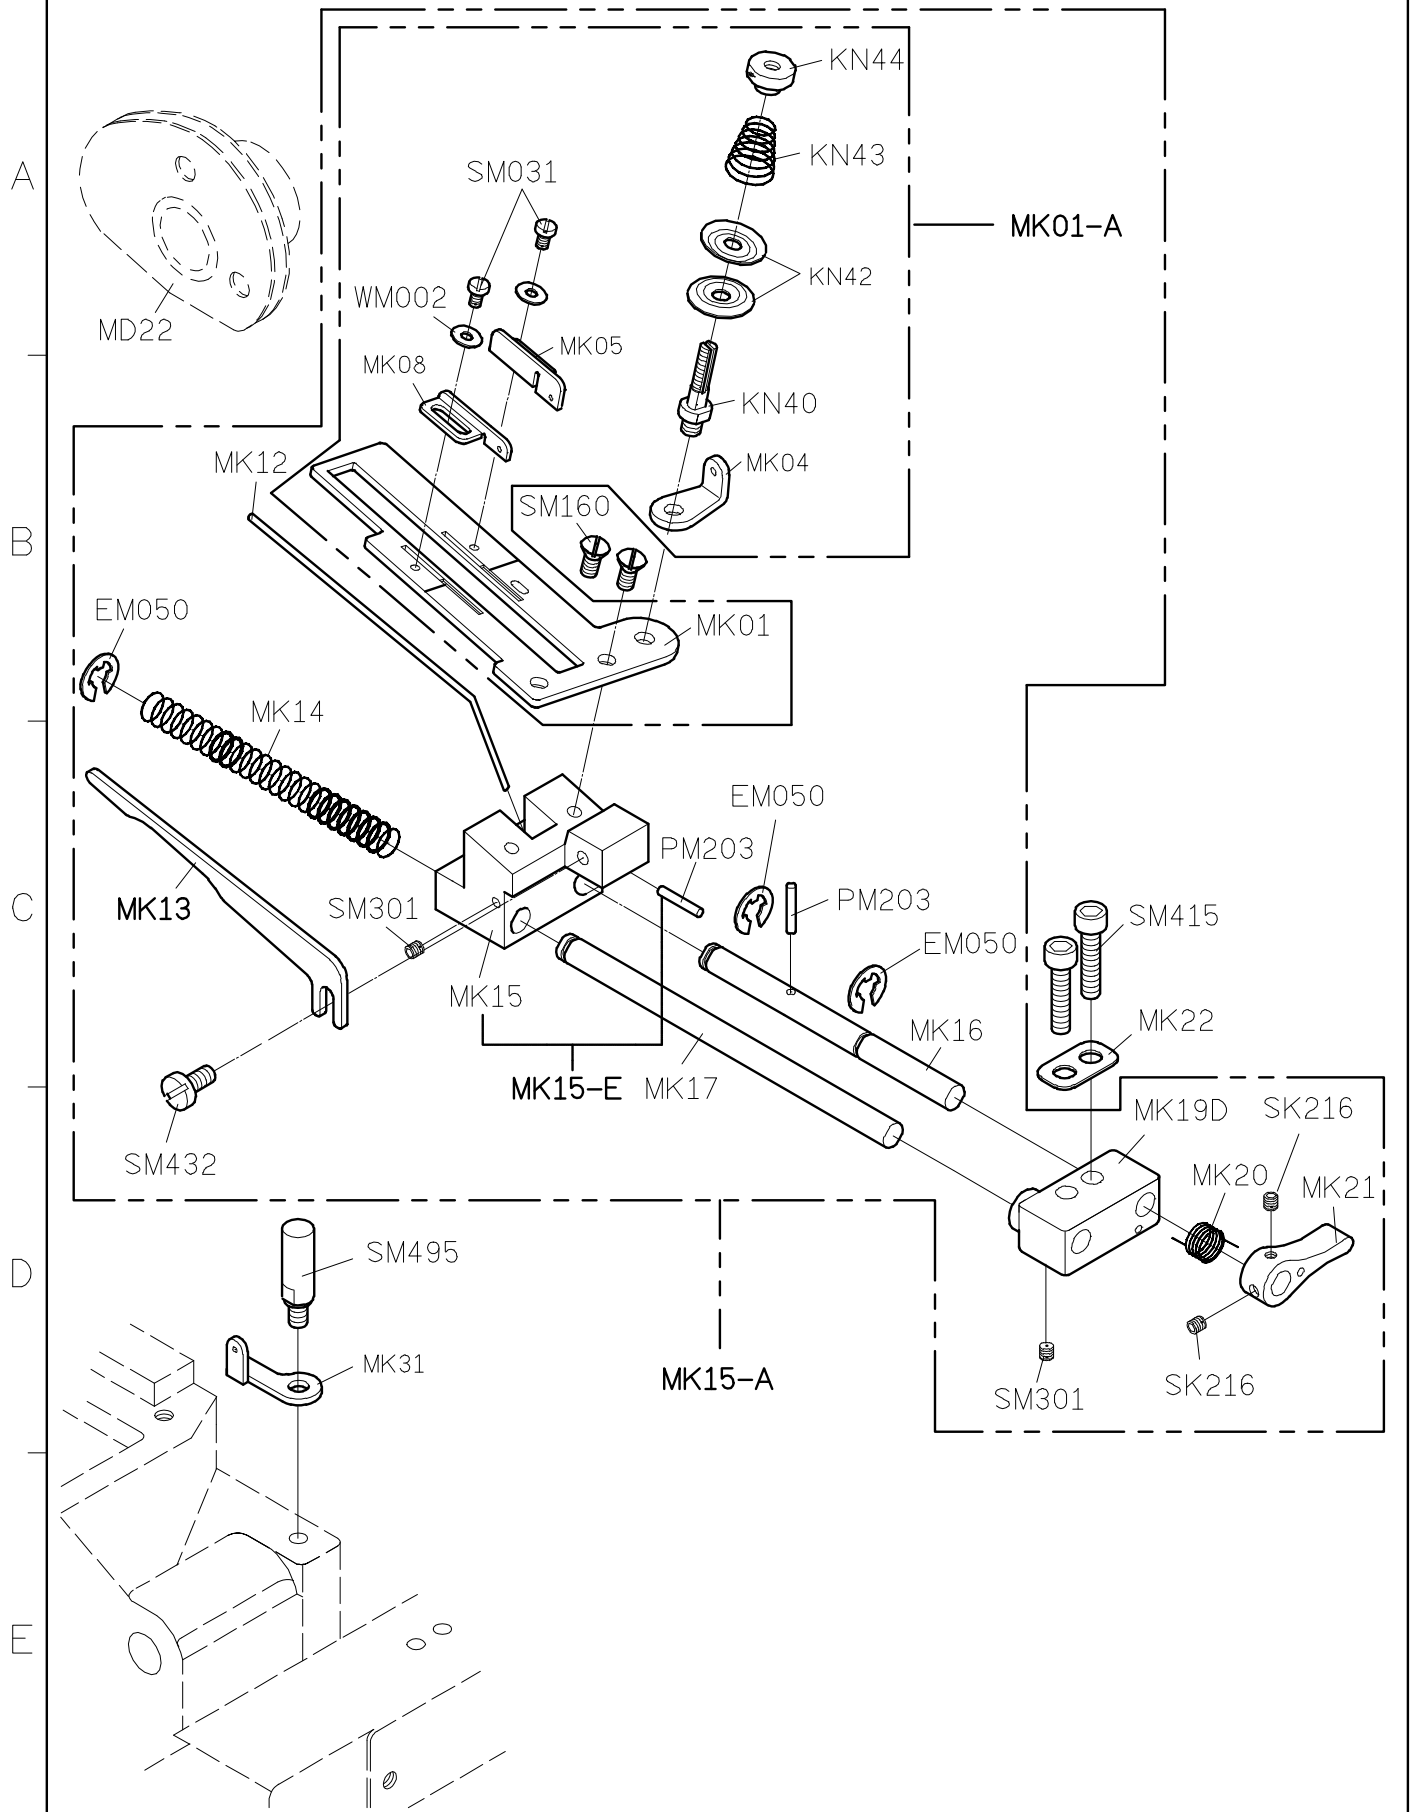
PARTS LIST

FOR

MK

GROUP

P2/2





P.1/1



F007J PARTS LIST FOR MN GROUP P.1/2

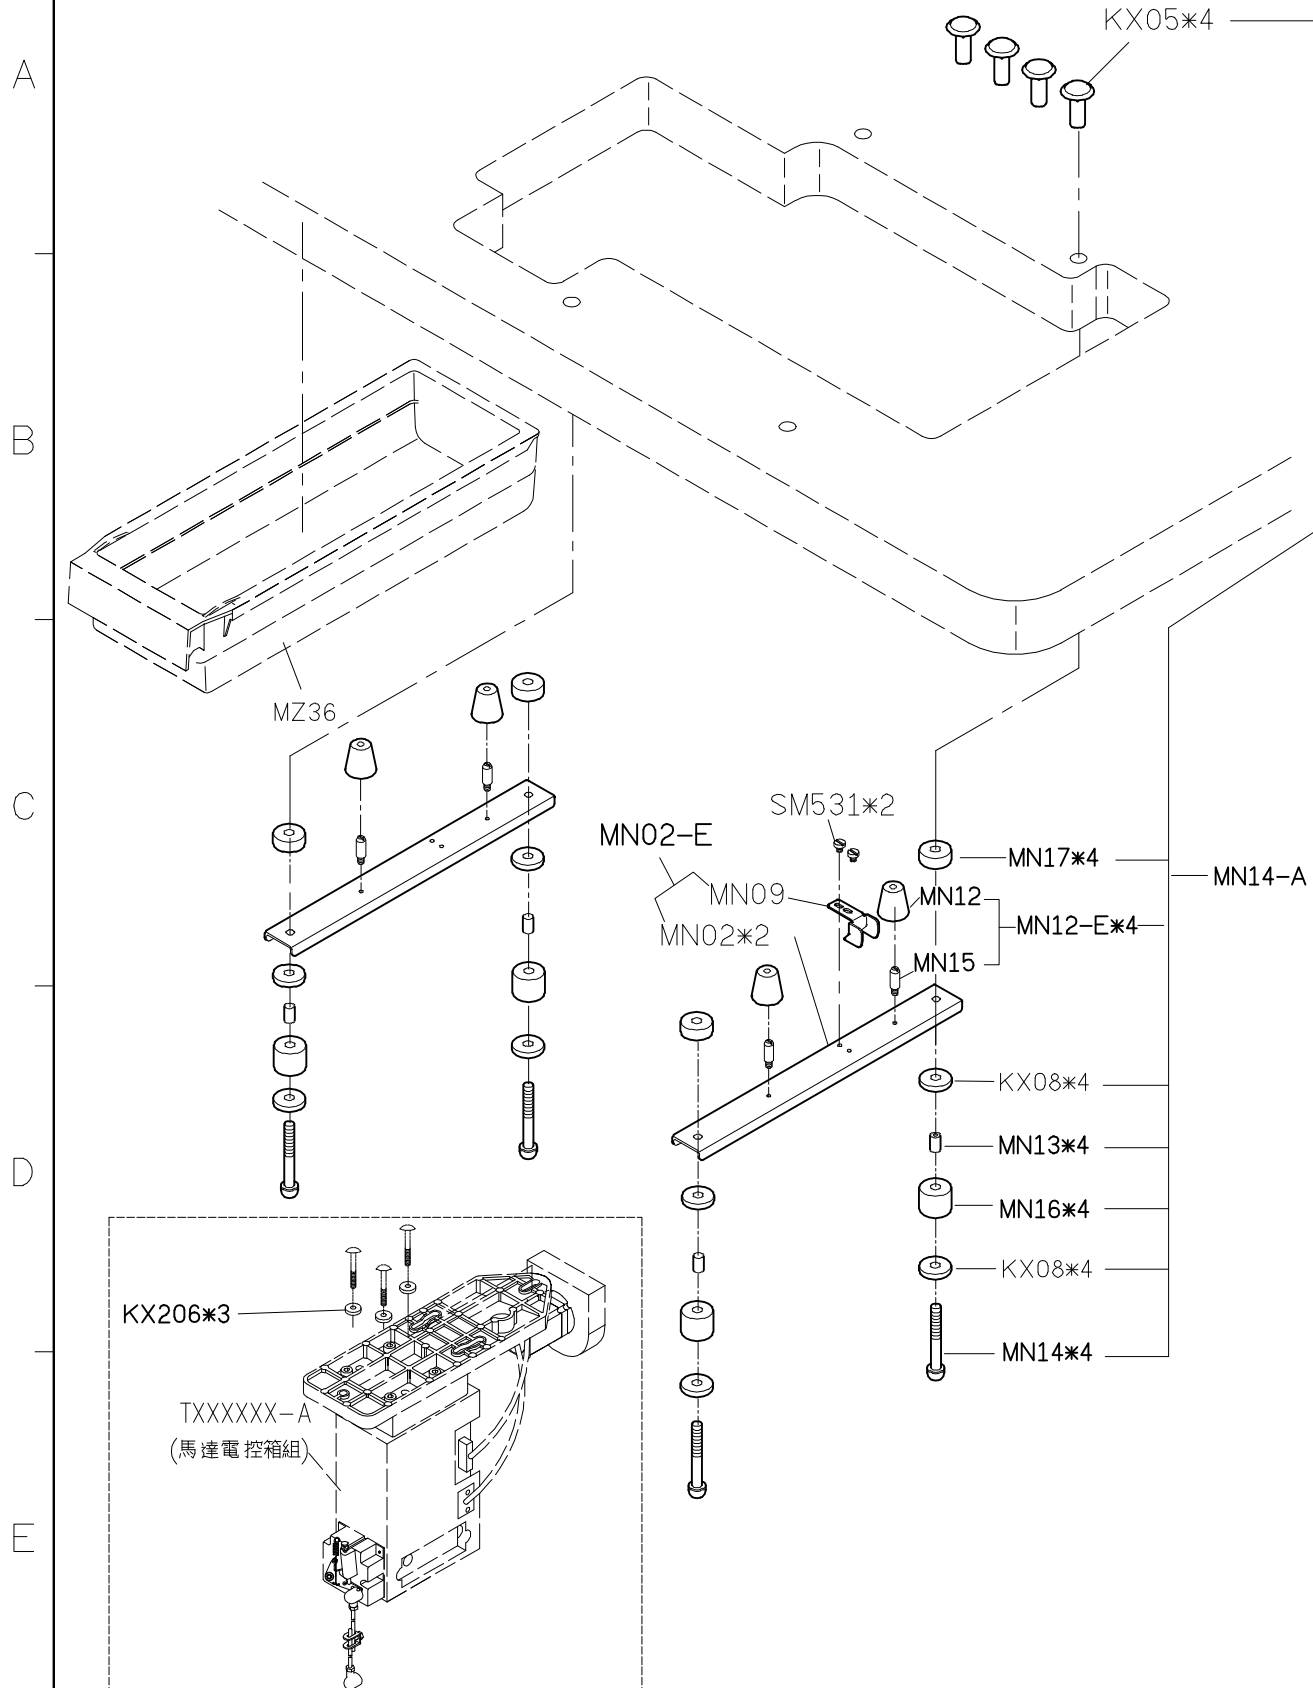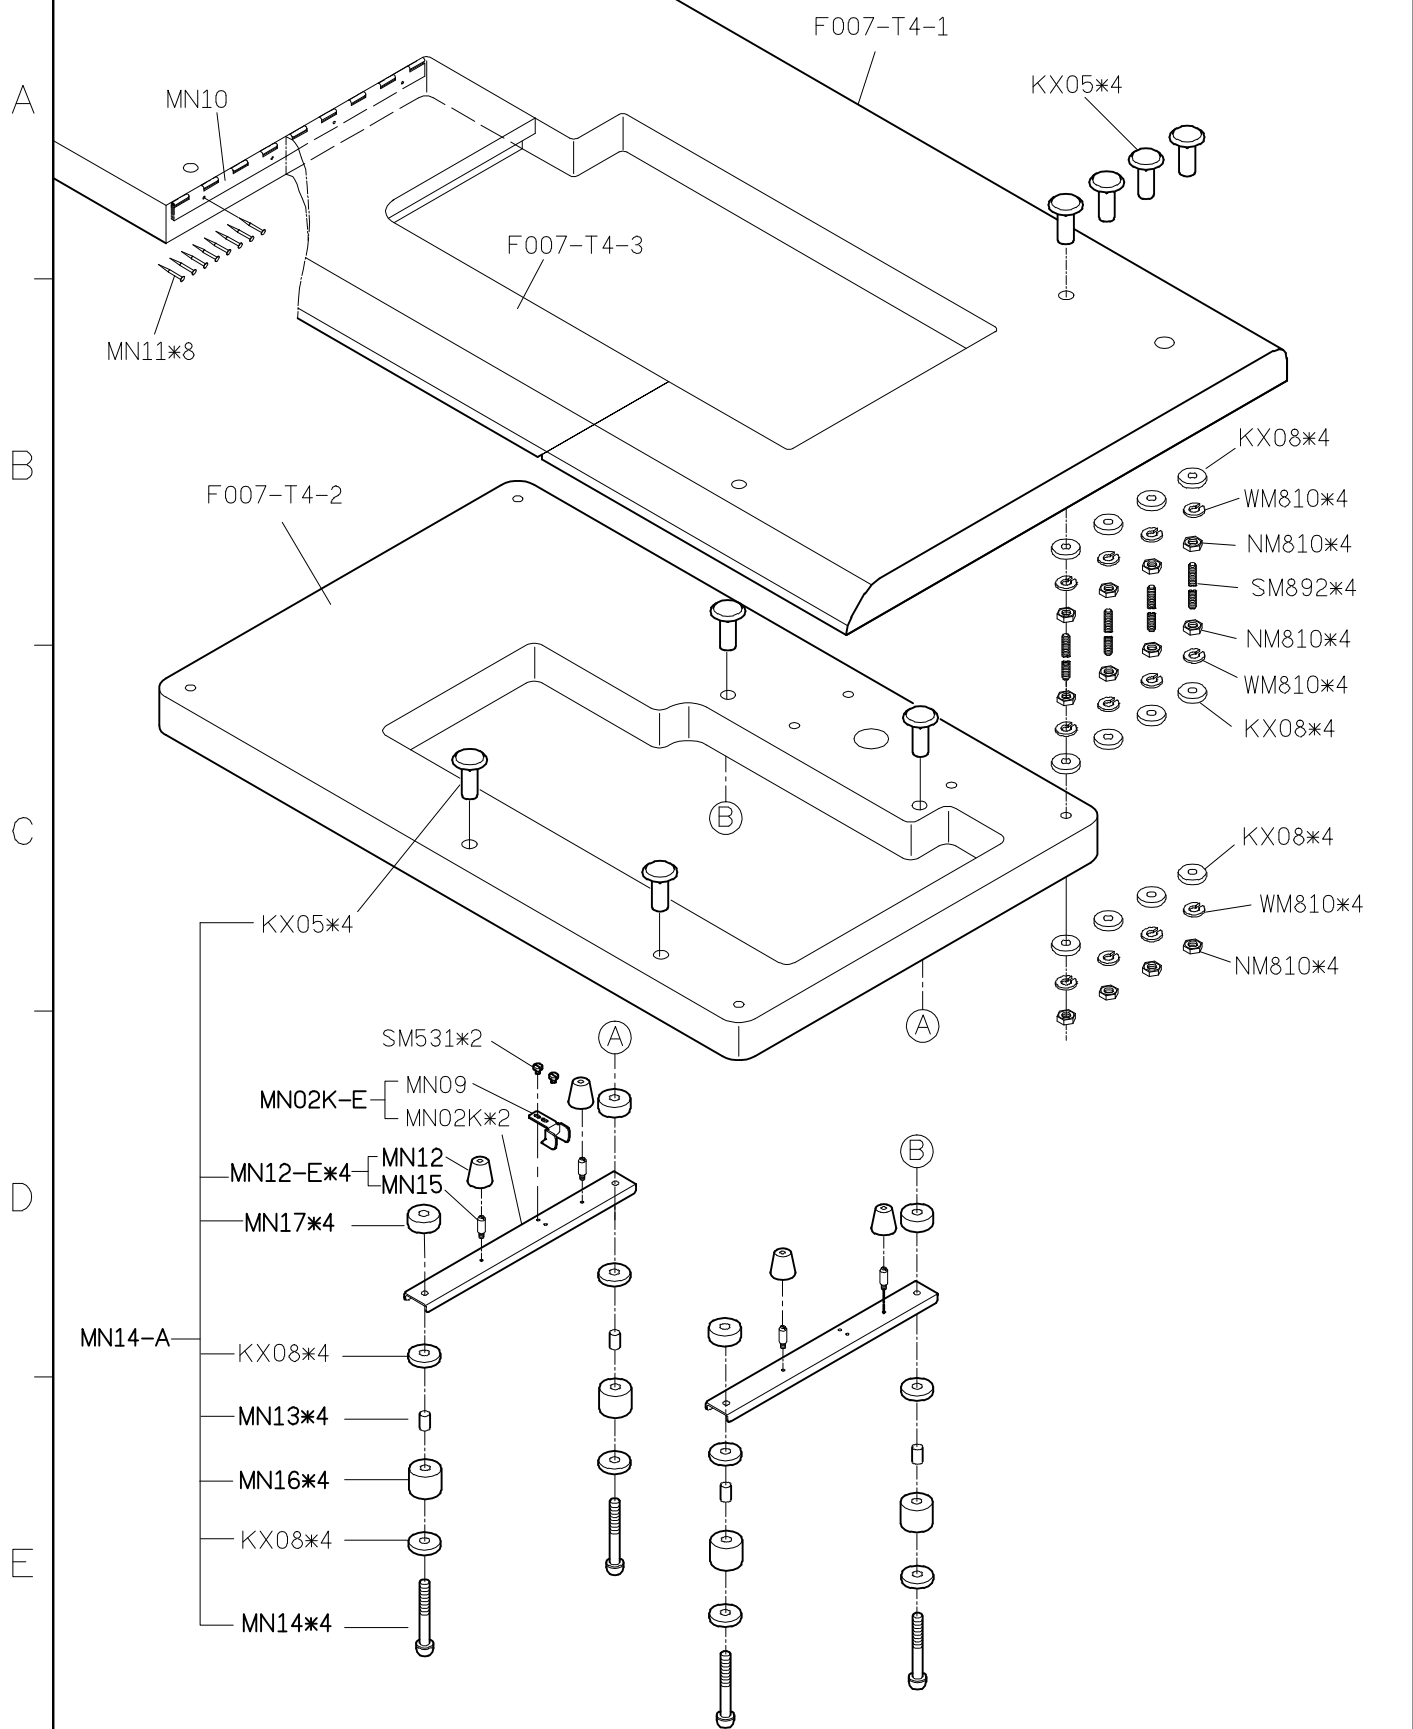下乘式桌板





PARTS LIST FOR MY GROUP 系列圖 1

A

B

C

D

E

MY01

KY03

KY04

KY05-A

KY23-A

KY23(6/7mm)

KY09

MY10-A

MY09

KY10

MY10

MY11

MY12

KY11

KY14

LY33-A

LY33

LY34

KY18

KY20D-A

針*5

MY21-E

KY21-1

MY21

KY201

KZ03*1

KT14-A

FR40

加裝FR時用

MY42

使用說明書

MY43

零件圖

MY44

(UT973)
(UT974)

平車特殊件零件圖

零件圖	
基本車	MY43
特種車	MY43 MY44
UTG/UTH	MY43 UT973
特種車 + UTG/UTH	MY43 MY44 UT973
UTJ/UTK	MY43 UT974
特種車 + UTJ/UTK	MY43 MY44 UT974

FOR F007J/F007JD/F858J/F858JD

11/12/23

FOR F007J/F007JD/F858J/F858JD

PARTS LIST FOR MZ-J GROUP 系列圖 1

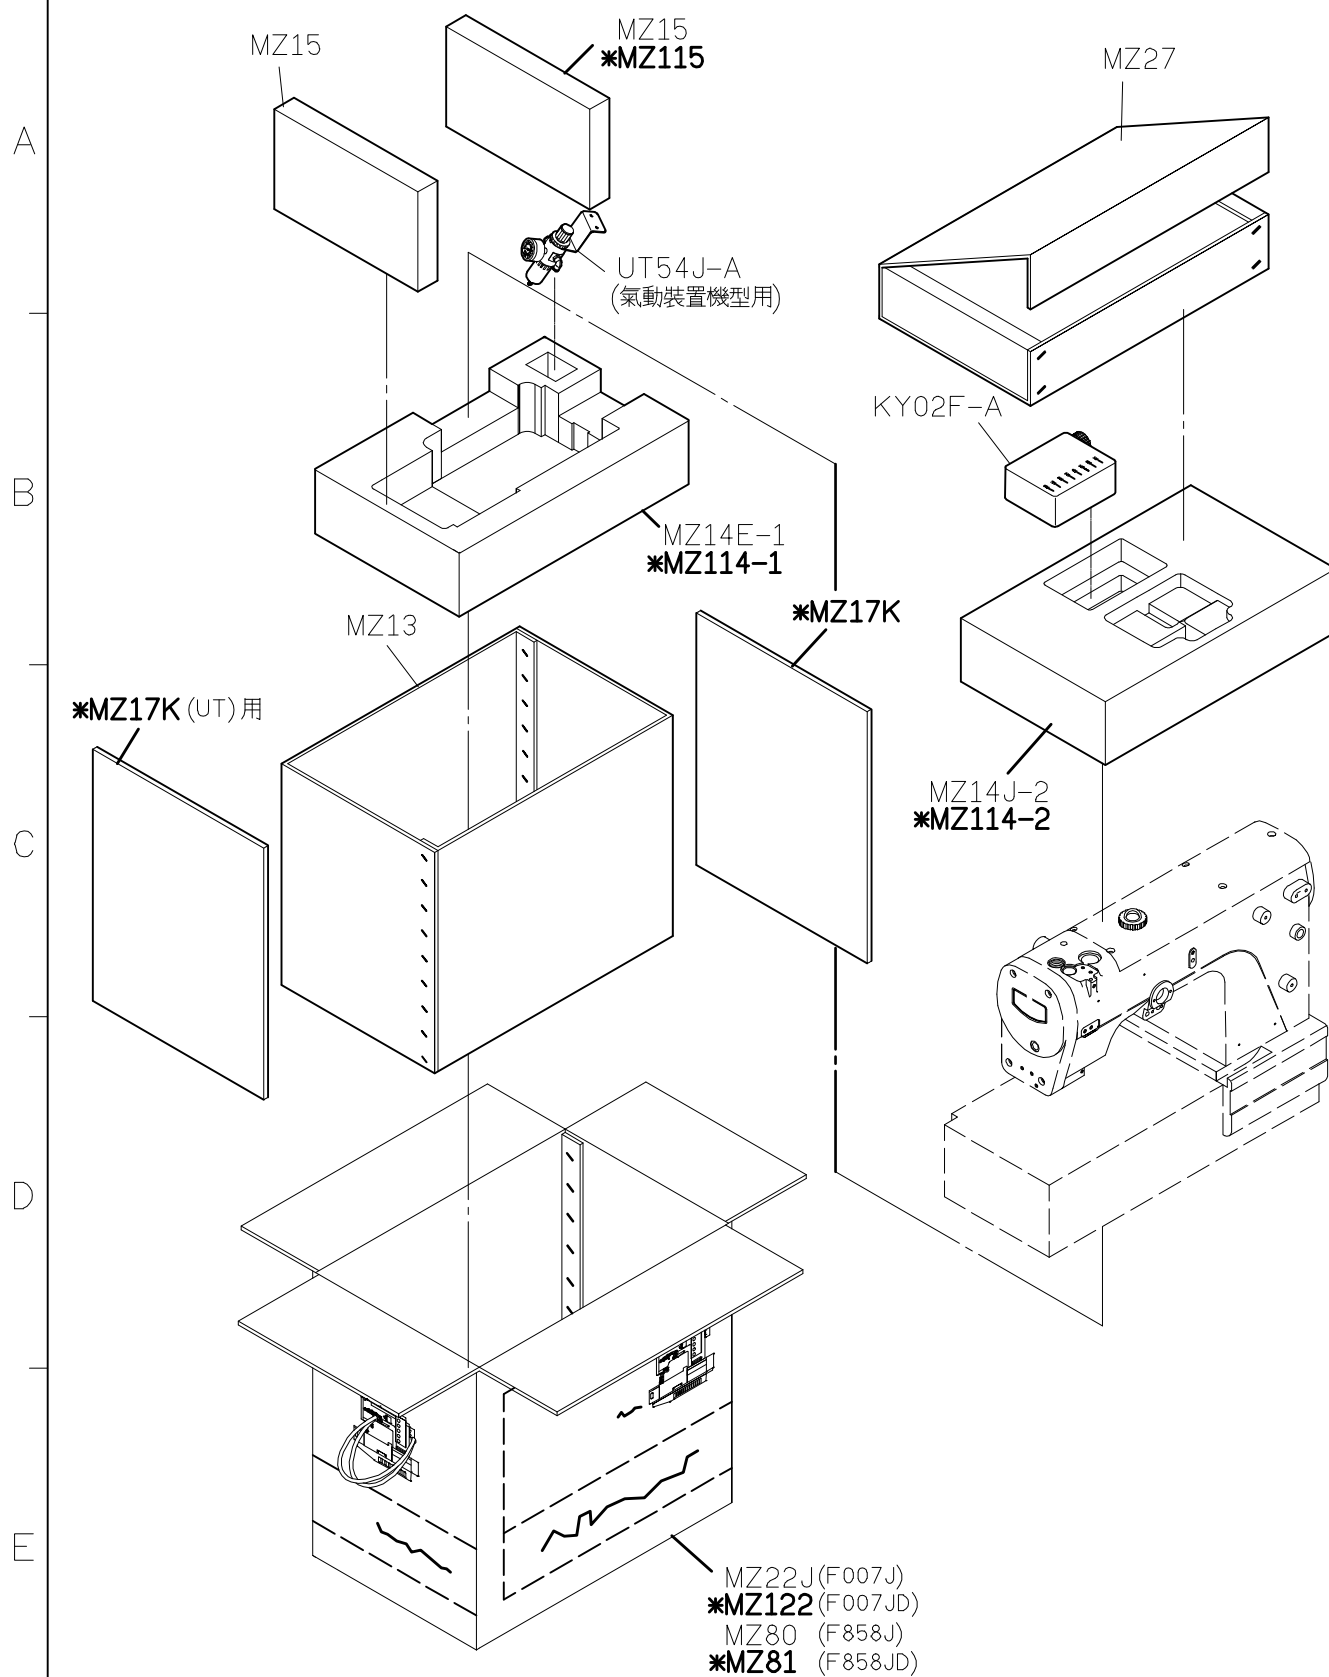


TABLE CUT-OUT OF F007-T

三針平車下乘桌板圖

F007J SERIES TABLE CUT-OUT SEMI-SUBMERGED

單位/UNIT:mm

FOR一般車及自動切線

所有尺寸公差/DIFFERENCE:±2

FFD型加鉗 $\phi 20$ 虛線孔

F007-T-1070長度(L):1070/重量:11.5kg±5%

F007-T長度(L):1200/重量:12.5kg±5%

全封邊灰格紋光塑面台板

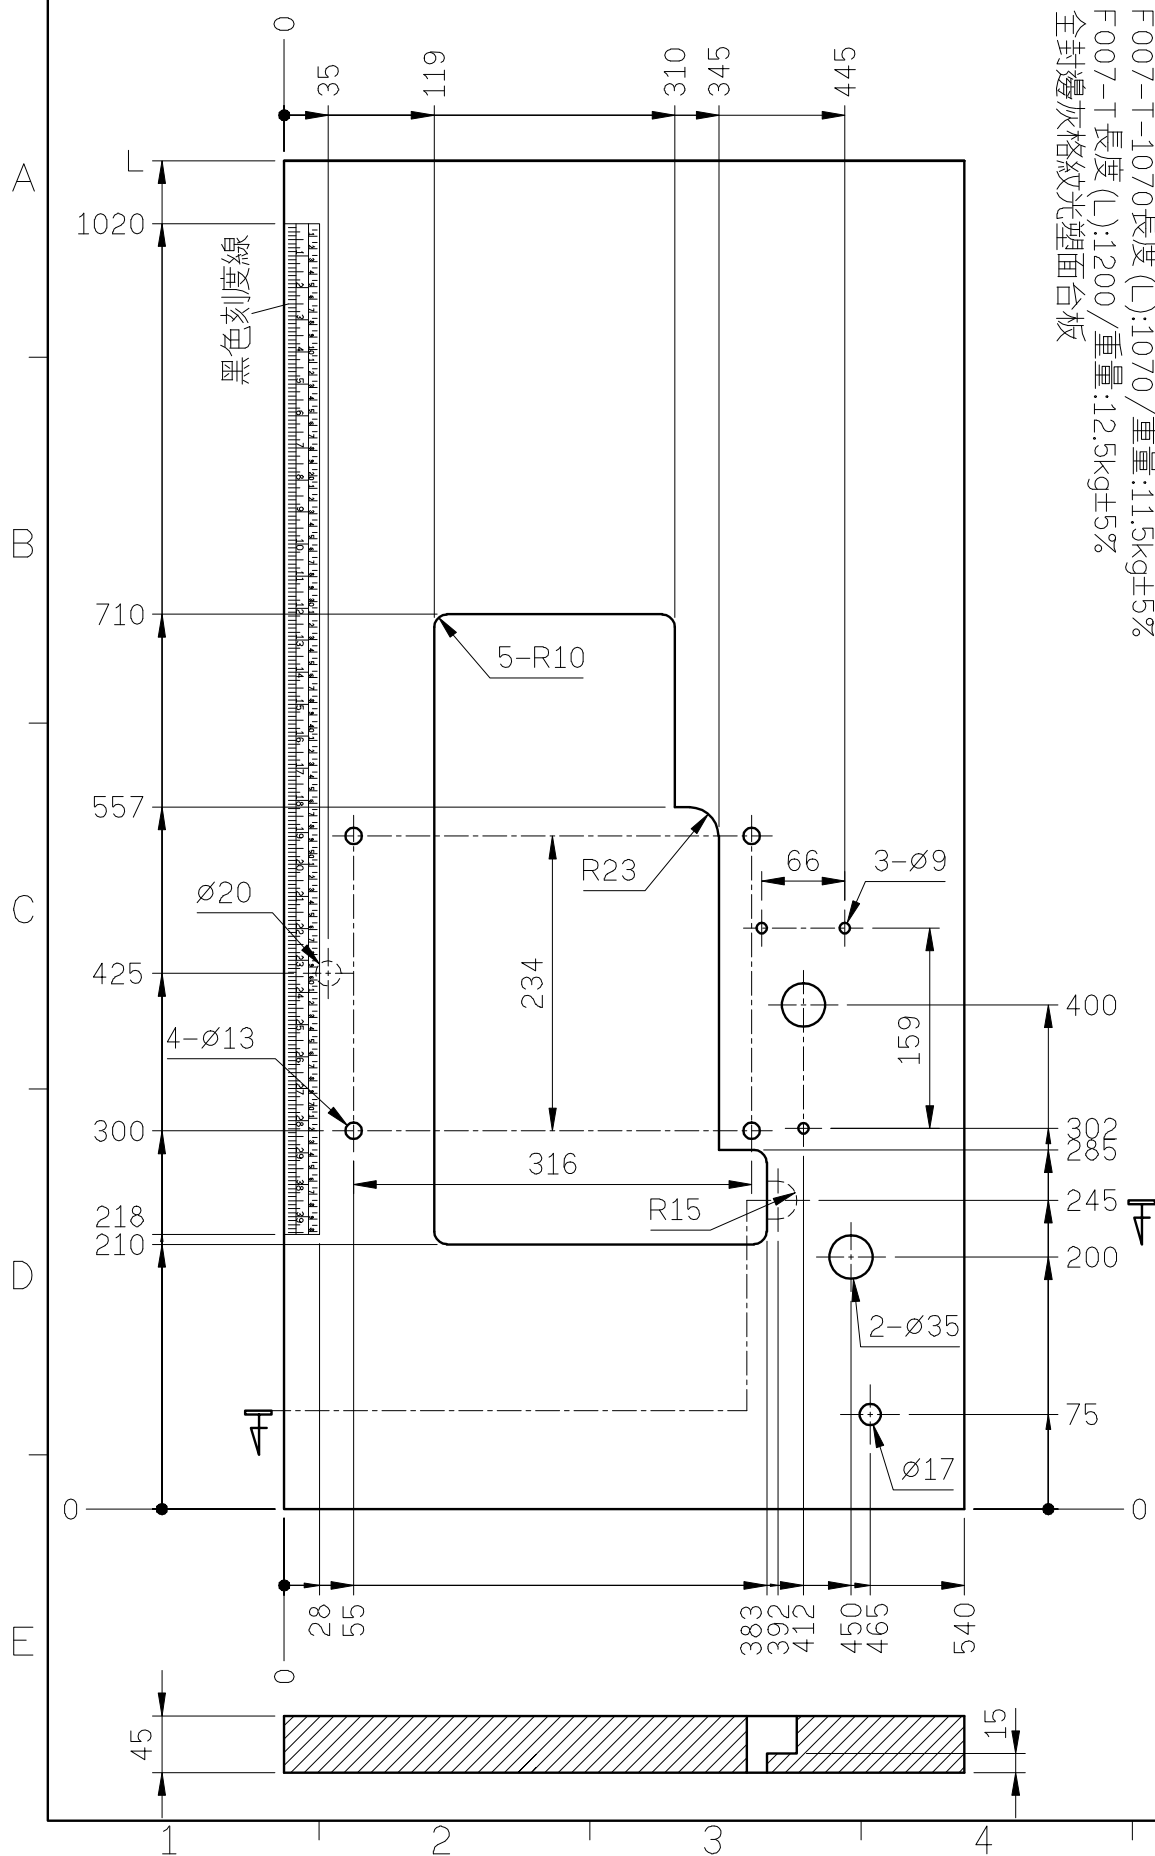


TABLE CUT-OUT OF F007-T4-T1

三針平車全沉式桌板圖

F007J SERIES TABLE CUT-OUT SUBMERGED

單位/UNIT:mm

FOR 一般車

所有尺寸公差/DIFFERENCE:±2

F007-T4-1長度(L):1200/重量

全封邊灰格紋光塑面台板

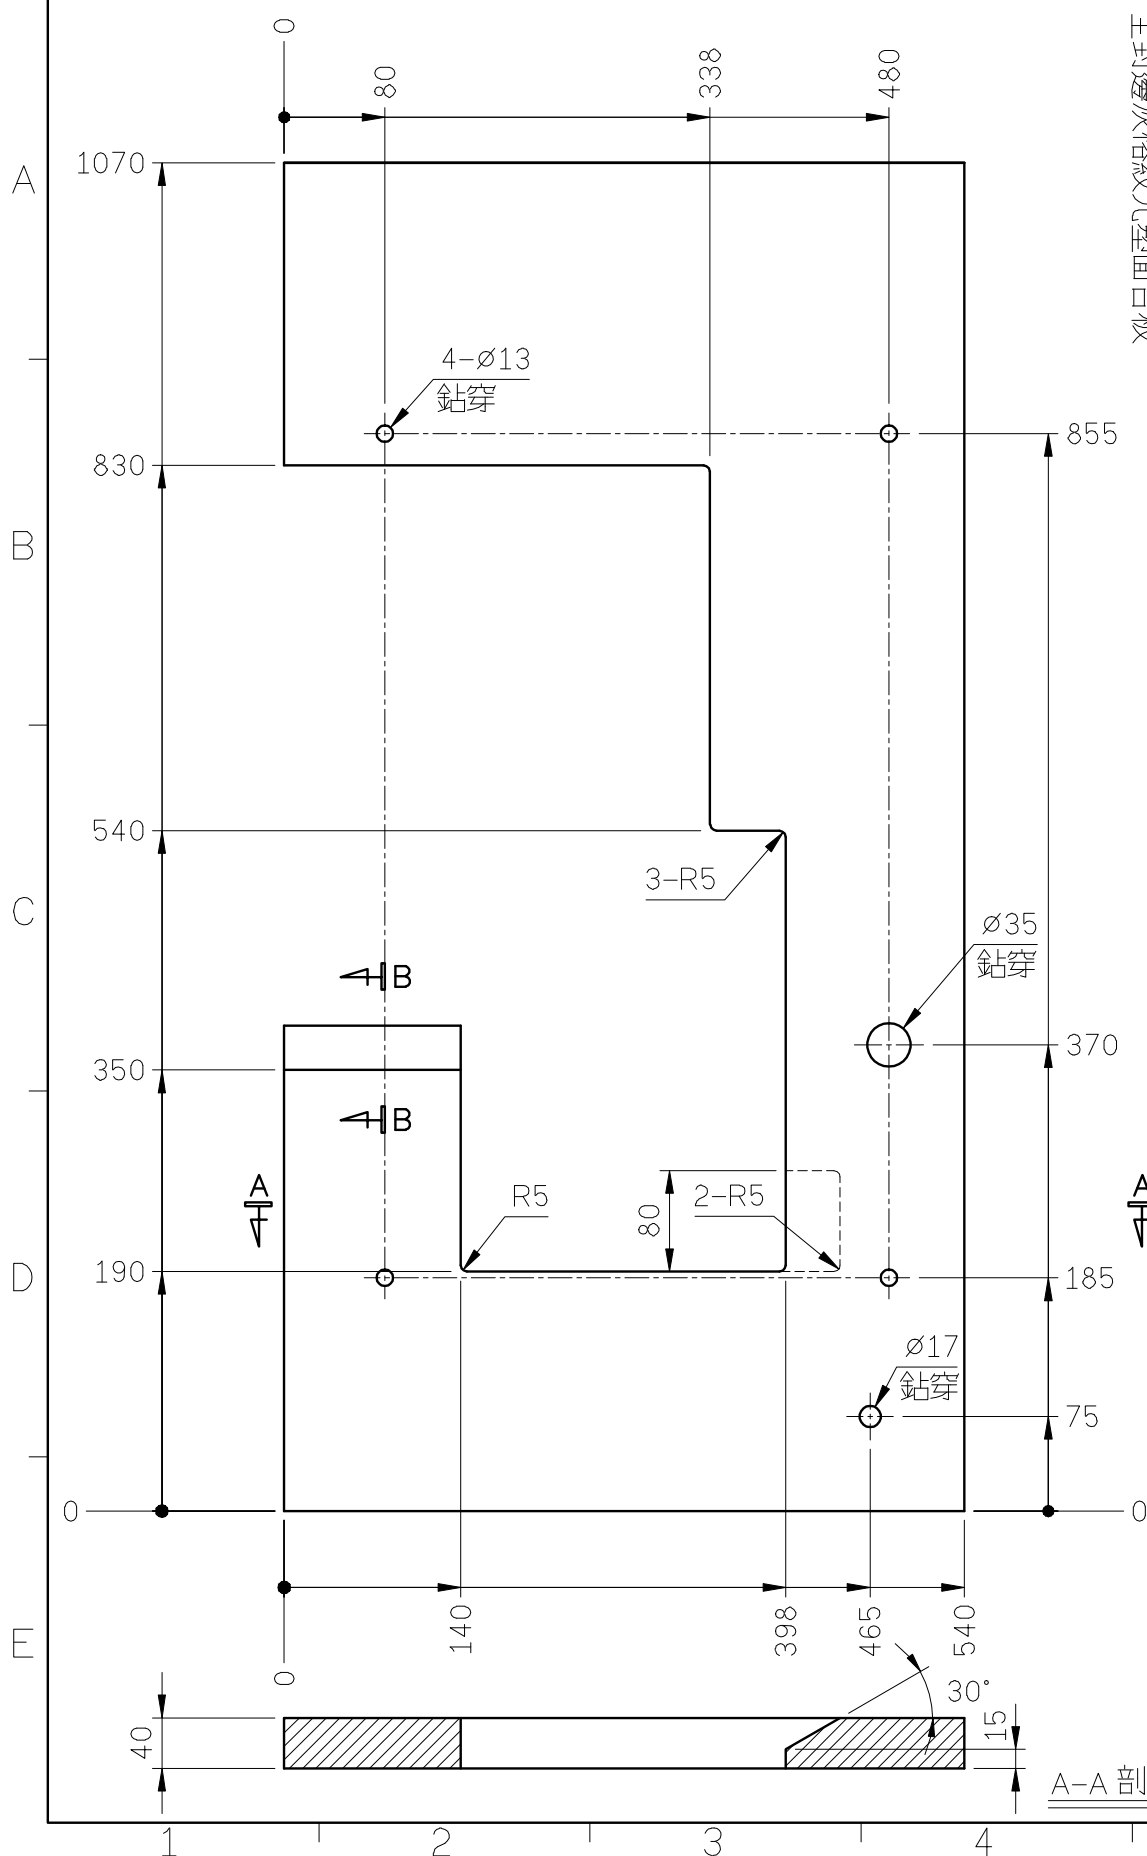


TABLE CUT-OUT OF F007-T4-2

三針平車全沉式桌板圖
F007E SERIES TABLE CUT-OUT SUBMERGED
單位/UNIT:mm
FOR一般車
所有尺寸公差/DIFFERENCE:±2
全封邊灰格紋光塑面台板
厚度:4.0mm


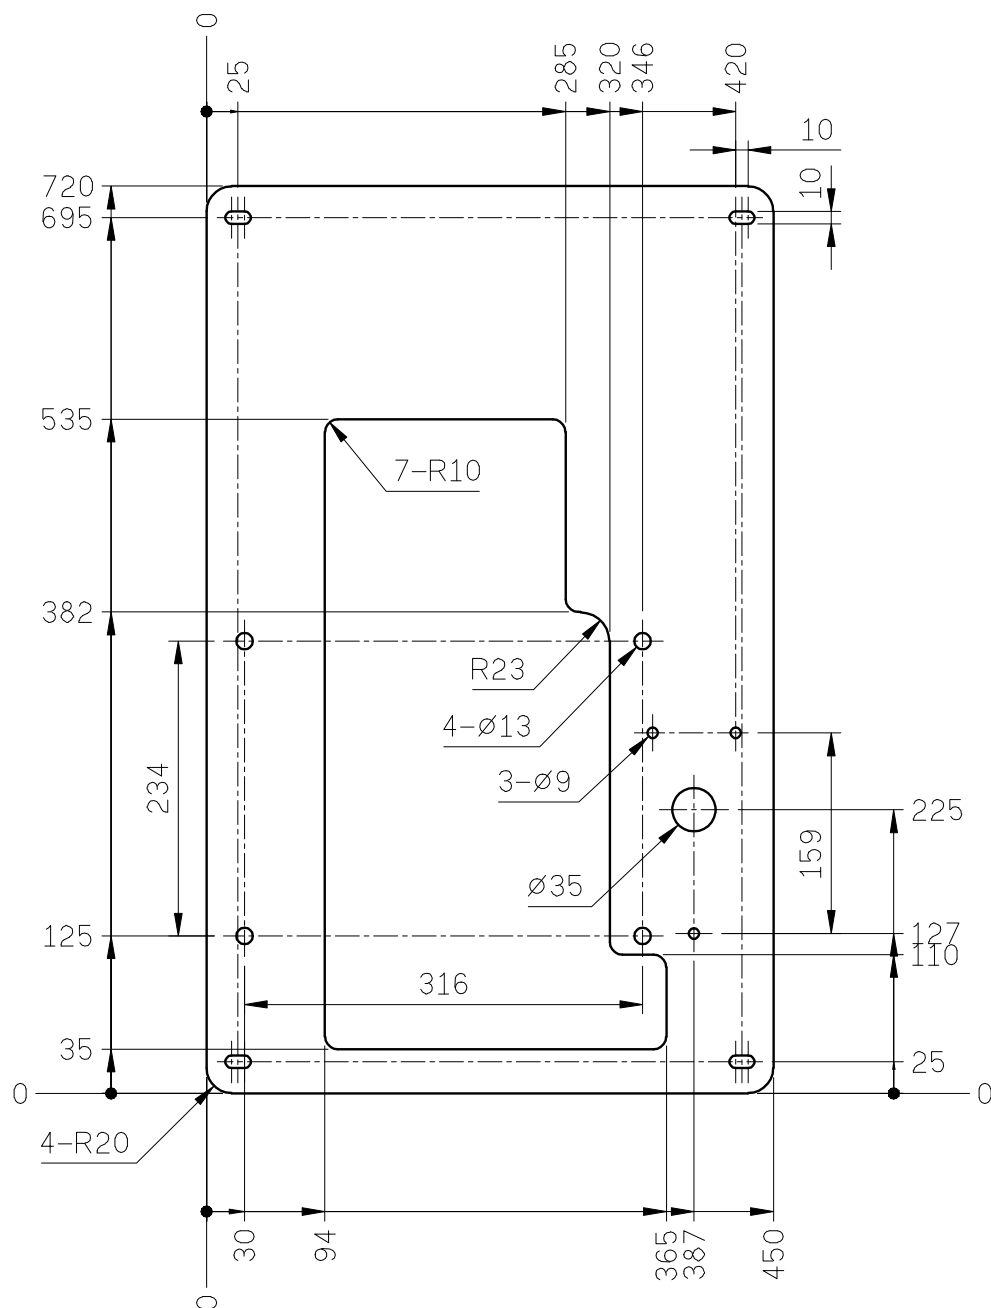


TABLE CUT-OUT OF F007-T4-3

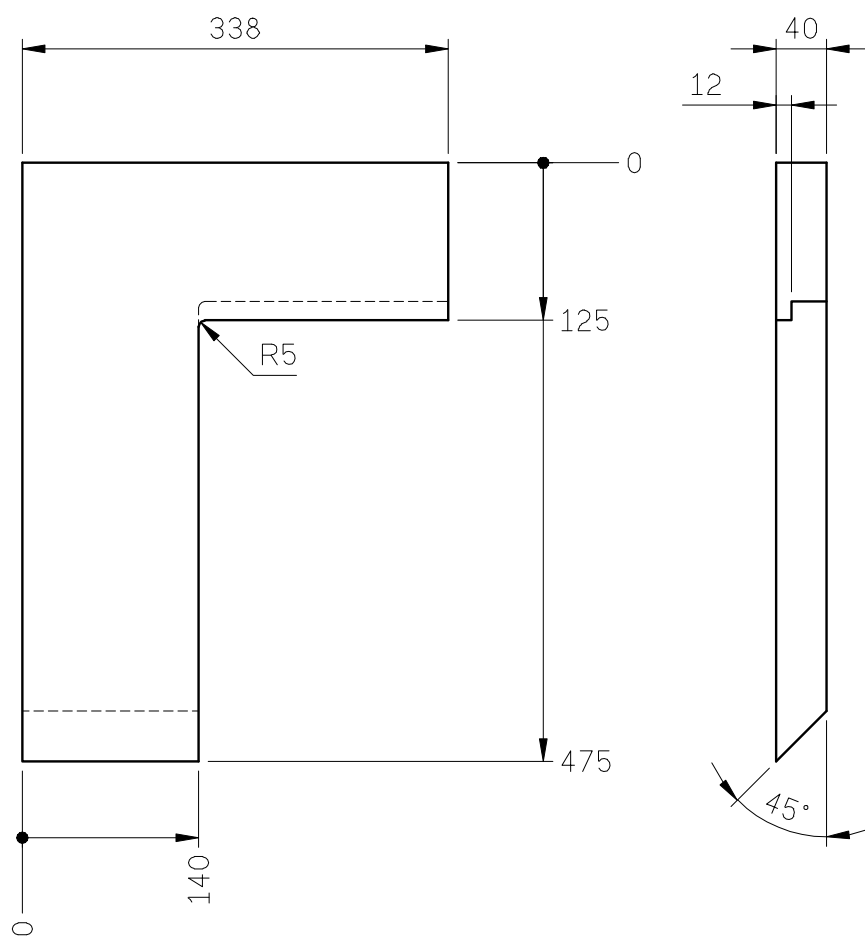三針平車全沉式桌板圖
F007 SERIES TABLE CUT-OUT SUBMERGED
單位/UNIT:mm
FOR一般車
所有尺寸公差/DIFFERENCE:±2
全封邊灰格紋光塑面台板



F007J SERIES TABLE CUT-OUT SEMI-SUBMERGED

mm/UNIT:

所有尺寸公差/DIFFERENCE:±2

F007-T5-1070長度(L):1070/重量

F007-T5長度(L):1200/重量

全封邊灰格紋光塑面台板

